

KOSTAL Smart Energy Meter (KSEM)

KOSTAL



Flexible in use

Integrated 3-phase energy measurement of up to 63 A

Higher measurement currents possible using converter

2 LAN interfaces

2 RS485 interfaces (Modbus RTU)

Smart connected

Can be combined with PIKO 4.2-20, PIKO EPC, PIKO MP plus, PIKO IQ, PLENTICORE plus

Data display

Prepared for EEBus for integration in a Smart Home

Functions can be extended via software updates



Smart performance

High measurement accuracy

Current sensor and energy manager for connecting AC batteries

Smart control for multiple-inverter connection

Easy to install

Installation in control cabinet on top-hat rail

Simple device configuration using online interface and preset values

Software is updated via online interface



PIKO IQ / PLENTICORE plus

- 24-hour home consumption measurement
- Dynamic active power control
- Pre-configured Modbus RTU interfaces (RS485)
- Multiple-inverter connection with KOSTAL solar inverter
- Provision of measurement data when using battery functionality in combination with PLENTICORE plus
- Battery on the PLENTICORE plus is recharged from additional local generators



PIKO MP / PIKO MP plus

- 24-hour home consumption measurement
- Dynamic active power control
- Pre-configured Modbus RTU interfaces (RS485)
- Multiple-inverter connection with KOSTAL solar inverter¹
- Battery management with optional battery functionality on the PIKO MP plus^{1,2}
- Battery on the PIKO MP plus is recharged from additional local generators^{1,2}



PIKO 4.2-20 / PIKO EPC

- 24-hour home consumption measurement
- Dynamic active power control¹
- Multiple-inverter connection with KOSTAL solar inverter¹

¹) Available later on via software update

²) Activation code for battery for KOSTAL Smart Energy Meter can be purchased from shop.kostal-solar-electric.com

		KOSTAL Smart Energy Meter ¹
System data	Process data	ARM9 processor with 450 MHz, DDR2 RAM with 128 Mbyte eMMC Flash 4 GByte
	Operating system	Embedded Linux with integrated TCP/IP stack
	LAN interfaces for Modbus TCP	2 x (10/100 Mbit)
	RS485 interfaces for Modbus RTU	2 x (half-duplex, max. 115 200 baud)
	Rated voltage	V max. 230/400 V~
	Operating voltage	V 110/230 V~ ± 10%
	Frequency range	Hz 50/60 ± 5 %
	Self-consumption - voltage path per phase	VA < 0.01
	Self-consumption - current path per phase	VA < 2
	Self-consumption - entire device	W < 5
	Current (rated current/limiting current)	A 5 / 63 ³
	Starting current	mA < 25
	Product standards	EN 61010, EN 50428, EN 60950

Measurement accuracy ²	Voltage	%	± 0.5
	Current	%	± 0.5
	Active power	%	± 1.0
	Apparent power	%	± 1.0
	Reactive power	%	± 1.0
	Power factor	%	± 1.0
	Active energy / reactive energy according to IEC 62053-22 / -23 (typical)		Class 1
Mechanical data	Housing material		Fibreglass-reinforced polyamide
	Incandescent wire test according to IEC 695-2-1		Yes
	Protective class		II
	Protection class		IP2X
	Weight	kg	0.3
	Dimensions (H/W/D)	mm	88 x 70 x 65
	Connection cross-section (mechanical, e.g. for connecting external transformers)	mm ²	10-25 (1.5-25)
Torque for screw terminals	Nm	2	

Conditions	Ambient temperature	°C	-25 ... 45
	Storage temperature	°C	-25 ... 70
	Relative humidity (non-condensing)	%	Up to 75% as an annual average Up to 95% on up to 30 days/year
	Max. height above sea level for operation	m	2000

Subject to technical changes. Errors excepted. You can find current information at www.kostal-solar-electric.com. Manufacturer: KOSTAL Industrie Elektrik GmbH, Hagen, Germany


¹⁾ 2-year warranty

²⁾ Accuracy class according to IEC 61557-12 with reference to measuring value of the KOSTAL Smart Energy Meter.



If using external converters, the particular measurement accuracy must be taken into account. If using current sensors via the sensor bar, subject to the power factor the accuracy of the active power is class 2.

³⁾ Limiting current I_N / phase 63 A. Higher currents possible via converter.


KOSTAL Smart Energy Meter: suited to numerous purposes.

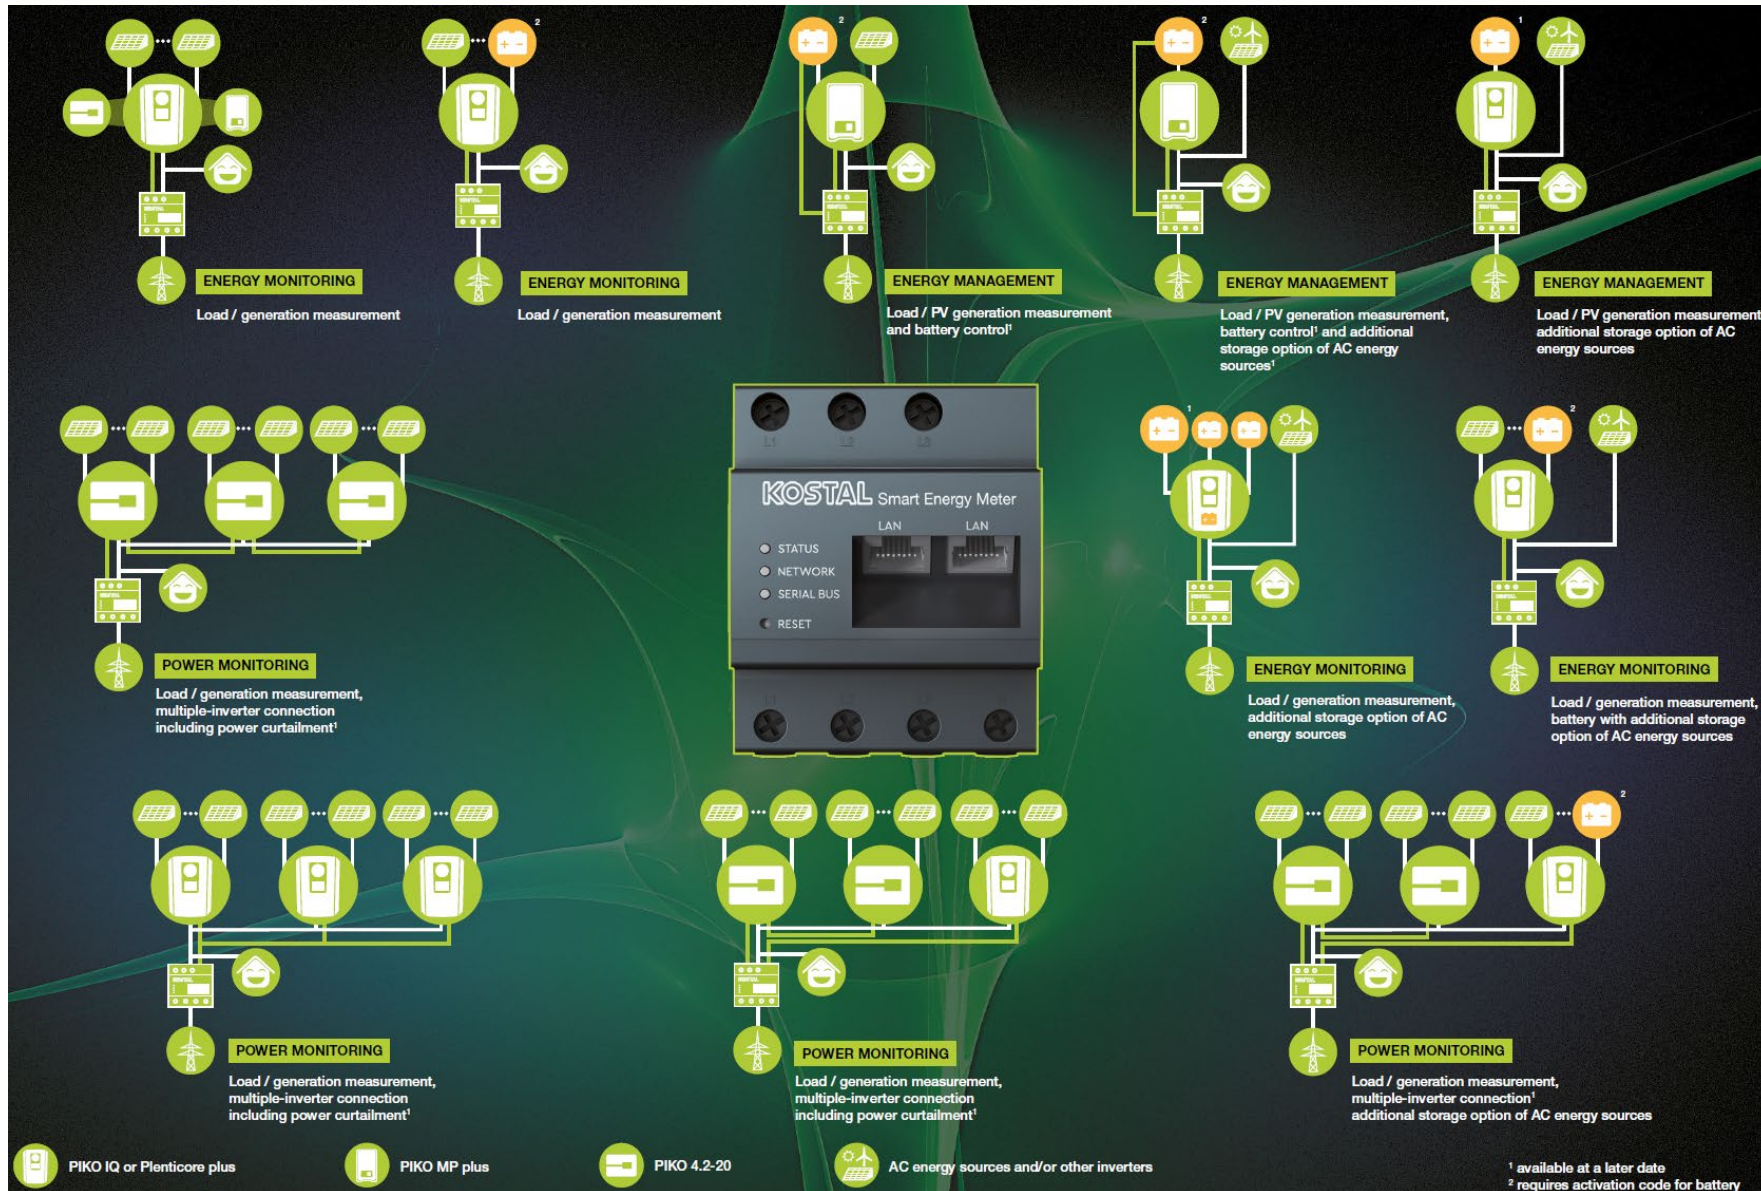

View from above at the KOSTAL Smart Energy Meter

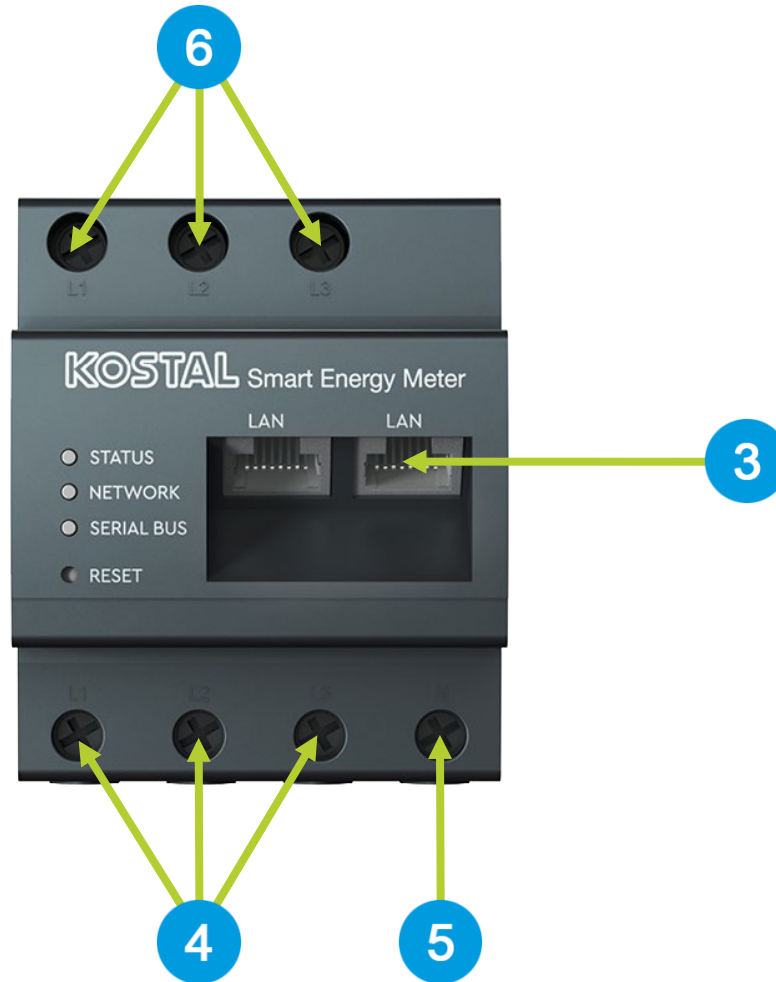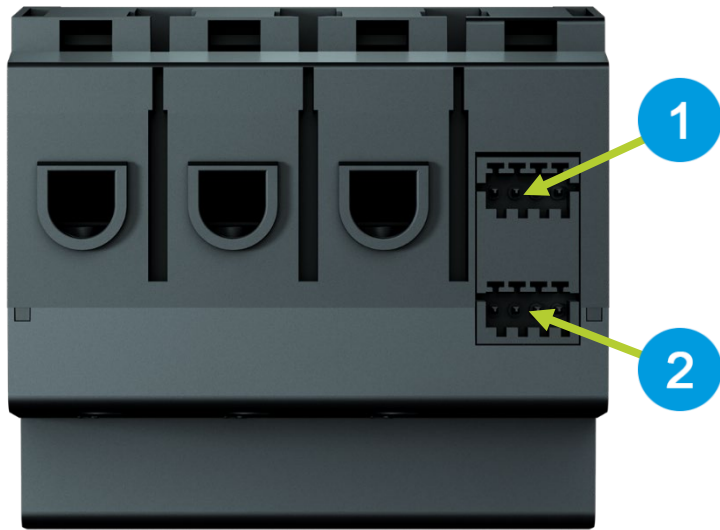

- 1** Modbus RTU RS485 interface (A) preconfigured for PIKO IQ/PLENTICORE plus
- 2** Modbus RTU RS485 interface (B) preconfigured for PIKO MP/PIKO MP plus
- 3** 2 x LAN interfaces
- 4** Inputs external wires - L1, L2, L3
- 5** Inputs neutral wire - N
- 6** Outputs external wires - L1, L2, L3

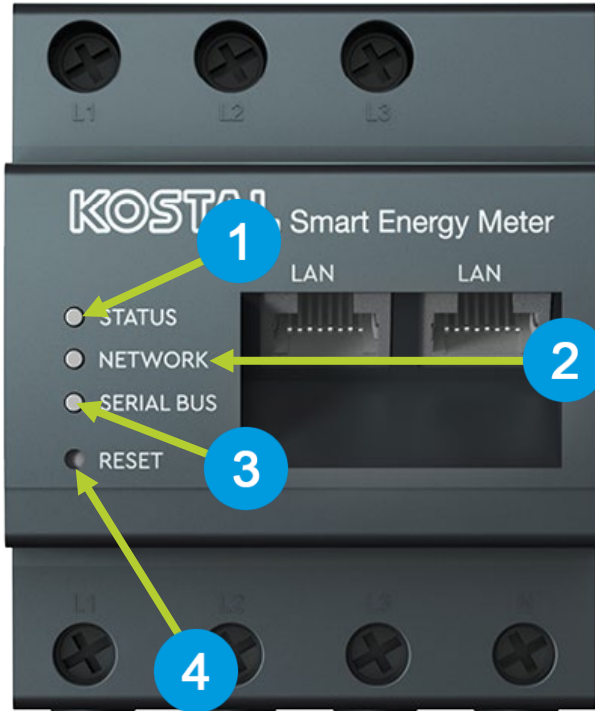

1 Status LED

2 Network LED

3 Serial bus LED

4 Reset button

Resetting the KOSTAL Smart energy Meter network settings

Use a pointed object to press the Reset button as follows:
 1x brief press (0.5 s) – then within 1 s, 1x long press (between 3 and 5 s).

Restarting KOSTAL Smart Energy Meter

Use a pointed object to press the Reset button for at least 6 s.

LED statuses





	Colour	State	Description
Status LED	Orange	On (<10 s)	Device starts
	Green	Flashes slowly	
	Green	On	Device ready
	Green	Flashes quickly	Firmware update active
	Red	On	Error – see “Troubleshooting” section
	Red	Flashes	
	Orange	On (>10 s)	

	Colour	State	Description
Network LED	-	Off	No connection
	Green	On	Network connection is being established
	Green	Flashes	Network connection is active
	Orange	Flashes 2 x	Confirmation for resetting the network settings using the Reset button

	Colour	State	Description
Serial bus LED	-	Off	No connection
	Green	Flashes quickly	Connection active
	Green	Flashes slowly	Scan process active
	Red	On	Error – overload 9 V output
	Orange	Flashes	Error – receiver not responding

View from above at the KOSTAL Smart Energy Meter

Smart Communication Board (SCB) in the PIKO IQ or PLENTICORE plus inverter

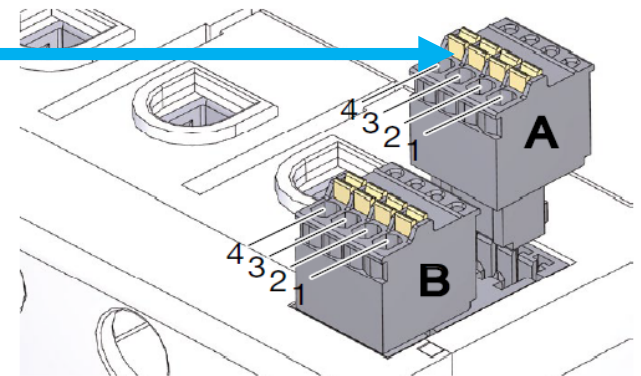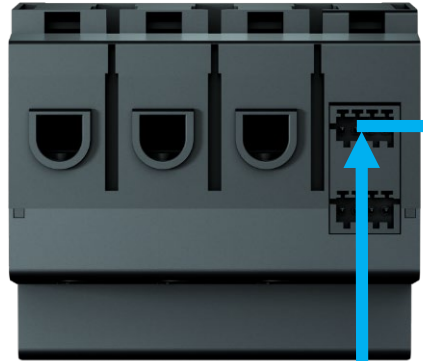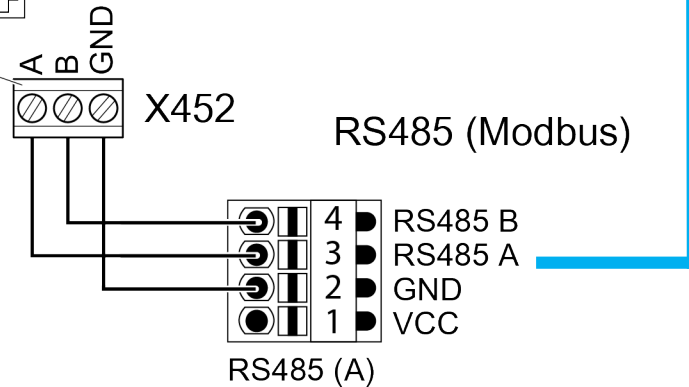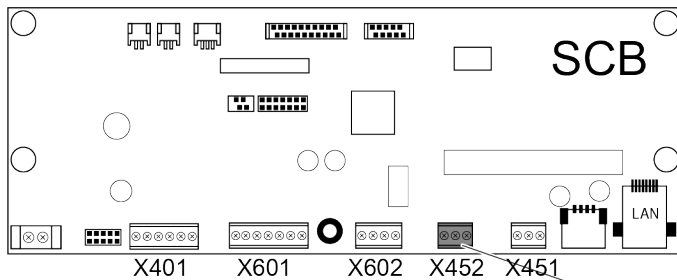



Connection assignment of RS485 plug:

Pin	Marking	Description
1A, 1B	VCC	Voltage output to supply ext. devices 9 V ± 10% / max. 280 mA
2A, 2B	GND	Ground
3A, 3B	A	RS485 A (preconfigured for PLENTICORE plus/PIKO IQ)
4A, 4B	B	RS485 B (preconfigured for PIKO MP plus/PIKO MP)

(RJ10) for PIKO MP or COM2 (Modbus RTU)
Connection for PIKO MP plus inverter



View from above at the
KOSTAL Smart Energy Meter

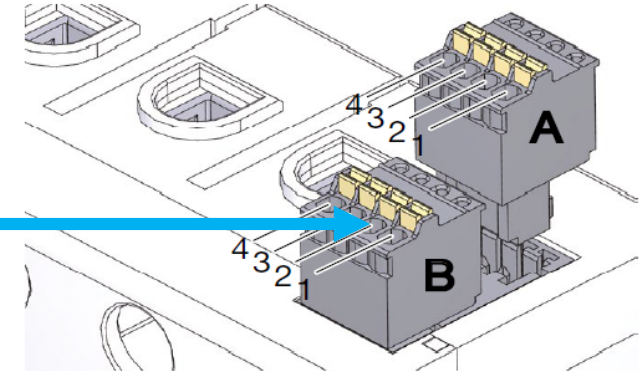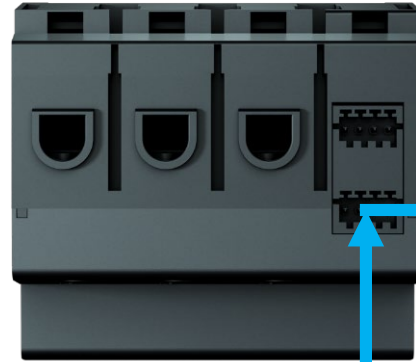

Connection assignment of RS485 plug:

Pin	Marking	Description
1A, 1B	VCC	Voltage output to supply ext. devices 9 V ± 10% / max. 280 mA
2A, 2B	GND	Ground
3A, 3B	A	RS485 A (preconfigured for PLENTICORE plus/PIKO IQ)
4A, 4B	B	RS485 B (preconfigured for PIKO MP plus/PIKO MP)

Device Connection	PIKO MP (RJ10)	PIKO MP plus (RJ45) COM2	Bus-Signal	Energy Meter
Pin	1	6	Data A = A	3
	2	7	Data B = B	4
	3	8	Masse = GND	2

- The Modbus RTU interfaces A and B are pre-configured as standard with the readout intervals for the PIKO IQ / PLENTICORE plus and PIKO MP / PIKO MP plus
- The KOSTAL Smart Energy Meter can be installed directly in the electrical distribution system and connected to the inverter without a PC (adjustment of parameters) and other settings.
- From firmware 1.20, the KOSTAL Smart Energy Meter is available for selection in the web server menu "Energy management". In order to make the selection, you must first have logged into the web server with the master key and the service password.

Web interface KOSTAL Smart Energy Meter

Interface RS485 A

Enable slave

Preset PIKO IQ / PLENTIC

Advanced

Slave address

Baudrate

Databits

Parity

Stopbits

Interface RS485 B

Enable slave

Preset PIKO MP / PIKO MI

Advanced

Slave address

Baudrate

Databits

Parity

Stopbits

Web interface inverter

Energy management

Energy meter KOSTAL Smart Energy Meter

Sensor position Grid connection point

Limitation of the active power to [W]

Dynamic limitation of the active power takes place under consideration of the home consumption.

Storage of excess AC energy from local generation

If there is a ripple control receiver connected to another inverter's digital inputs, these signals can be allocated to all inverters in the local area network (LAN) for active and reactive power control by means of UDP broadcast.

A local energy manager can also generate signals for active and reactive power control in the local area network.

Empfang der Broadcast-Steuersignale aktivieren

Save



Commissioning

Note: Connect the KOSTAL Smart Energy Meter to an existing local network.

1. Connect network cable to KOSTAL Smart Energy Meter network connection.
2. Connect the other end of the network cable to a router/switch or directly to the PC/laptop.

Calling up user interface

Calling up user interface using host name

Enter the host name of the KOSTAL Smart Energy Meter in your browser's address bar. The factory host name is made up of the product name and serial number. To log in you will need the password from the KOSTAL Smart Energy Meter's type plate, which can be found on the separate instruction leaflet in the packaging.

Example: KSEM-712345678

Note: This function depends on the router settings and may not be available in larger administered networks under some circumstances.

Calling up online interface via network environment under Windows (Win7 and Win10)

1. Under Windows, in File Explorer click on "Network" or open the Start menu using the Windows button and click on "Devices and printers". An icon entitled KOSTAL Smart Energy Meter (e.g. KSEM-712345678) should be visible.
2. Click on the icon – the standard browser opens with the KOSTAL Smart Energy Meter log-on page.

Note: The target network must not be classified in the PC as "Public network" otherwise this function will be blocked by Windows.

Using HTTPS in the browser

To use the KOSTAL Smart Energy Meter with HTTPS in the browser, enter "https://" in the address line.

Note: Because the KOSTAL Smart Energy Meter's online interface is not a website registered on the Internet, the browser will display it as unsafe. To call up the online interface anyway, the browser's warning must be ignored and a one-off or permanent exception added under "Advanced settings".

Configuring settings

Set the KOSTAL Smart Energy Meter's interfaces (RS485 Modbus) to suit the connected inverter. Under Modbus settings, you only need to select one inverter to the interface to do this. The appropriate values are stored as standard. However, you can adapt the values if necessary.

SOLAR ELECTRIC

KOSTAL

The screenshot shows the KOSTAL Smart Energy Meter user interface dashboard. The interface is divided into several sections:

- Header:** Includes the KOSTAL logo, language selection (English), and a Signout button.
- Navigation Menu:** Located on the left side, containing links for Dashboard, KOSTAL Solar Electric, Modbus Settings, Smart Meter, Tariffs, and Device Settings.
- Smart Meter Section:** Displays energy consumption data, including a current power value of 0.005 kW, and cumulative energy usage of 2528.42 kWh and 153.57 kWh.
- System Info Section:** Displays system status including CPU (454MHz, 26%), RAM (256MB, 23%), and Apps (7%).
- Footer:** Includes the text "Smart connection." and "Licenses".

Numbered callouts (1-7) indicate specific UI elements:

- Language selection (English)
- Web server Login/Logout (Signout)
- Show / hide web server menu (Hamburger menu icon)
- Web server menu (Navigation menu)
- Display of current power values (0.005 kW)
- Display of current system information (System Info section)
- License Note Texts (Licenses link)

- 1 Language selection
- 2 Web server Login/Logout
- 3 Show / hide web server menu
- 4 Web server menu
- 5 Display of current power values
 - Mouseclick → Display the Smart Meter menu
- 6 Display of current system information
 - Mouseclick → Display the device settings
- 7 License Note Texts

- Dashboard
- KOSTAL Solar Electric**
- Modbus Settings
- Smart Meter
- Tariffs
- Device Settings

1

KOSTAL Solar Electric

Inverter

Manage used inverters.

Name	Type	Address	State	
PLENTICORE plus	PIKO IQ / PLENTICORE plus	192.168.178.43	✓	i ✎ 🗑

2

Solar Portal

Configure PIKO Solar Portal.

3

4

Power Limitation

Set inverter power limitation.

- 1 Manage used inverters for power limitation and swarm connection
- 2 Display the used inverters
- 3 KOSTAL Solar Portal activate/deactivate
- 4 Setting values for active power limitation

The connection of the KOSTAL Smart Energy Meter to KOSTAL solar inverters serves to reduce the feed-in power of inverters if necessary. In addition, the KOSTAL Smart Energy Meter can be connected to the KOSTAL Solar Portal to transfer data from the KOSTAL Smart Energy Meter and the inverter to the Portal.



- Dashboard
- KOSTAL Solar Electric
- Modbus Settings**
- Smart Meter
- Tariffs
- Device Settings

Home / Modbus Settings / App

Modbus Settings

- 1** **Modbus RTU**
Configuration of serial interfaces.
- 2** **Modbus TCP**
Configuration of TCP interface.


- 1** Setup the Modbus RTU (RS485) interface
- 2** Setup the Modbus TCP interface

Select the devices which are connected to the RS485 Modbus RTU interfaces or activate the Modbus TCP functionality via Ethernet (LAN).


- Dashboard
- KOSTAL Solar Electric
- Modbus Settings
- Smart Meter**
- Tariffs
- Device Settings

Home / Smart Meter / App

Active Power

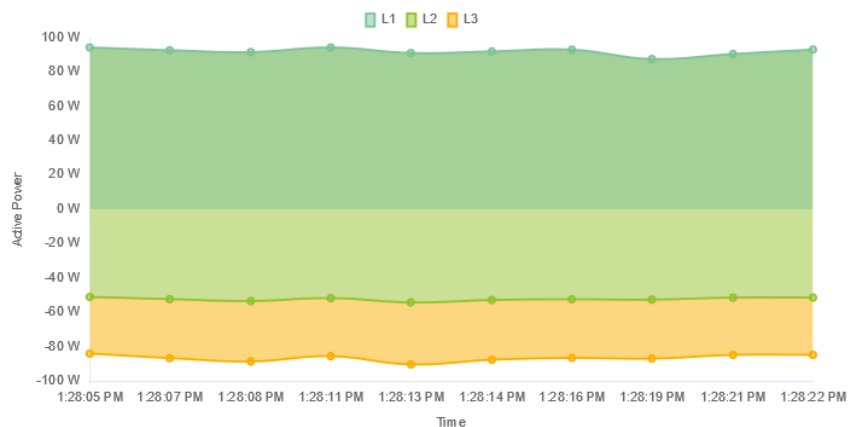

Active Energy

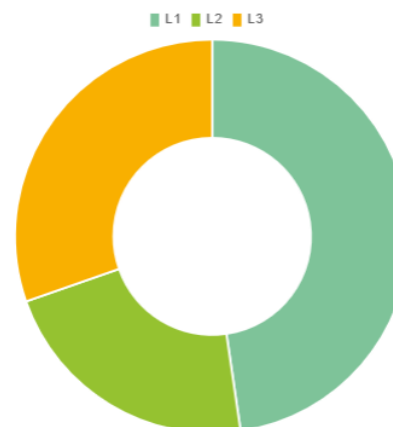

consumption

L1: 1281.0 kWh
 L2: 589.2 kWh
 L3: 815.4 kWh
 Total: 2685.6 kWh

Measured Values per Phase

enhanced	Phase L1	Phase L2	Phase L3	Total
Current	0.9 A	0.4 A	0.4 A	1.7 A
Voltage	238.1 V	234.8 V	236.3 V	
Power Factor	0.50	0.84	0.55	0.06
Active Power	+92.9 W	-51.5 W	-33.3 W	+8.1 W
Active Energy	+1281.0 kWh	+589.2 kWh	+815.4 kWh	+2528.4 kWh
	-54.8 kWh	-145.4 kWh	-110.6 kWh	-153.6 kWh

SOLAR ELECTRIC



Dashboard

KOSTAL Solar Electric

Modbus Settings

Smart Meter

Tariffs

Device Settings


Home / Tariffs / App

Tariff name

Consumption

Display period

Day

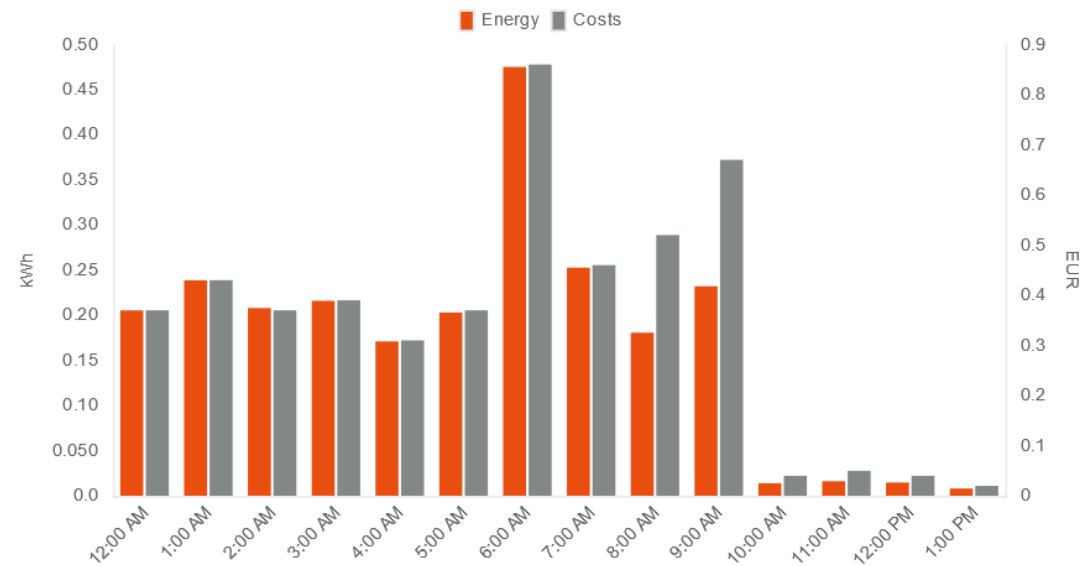

06 Mar 2019



SOLAR ELECTRIC

KOSTAL


English Signout

- Dashboard
- KOSTAL Solar Electric
- Modbus Settings
- Smart Meter
- Tariffs**
- Device Settings

Home / Tariffs / App

Tariff name

Display period

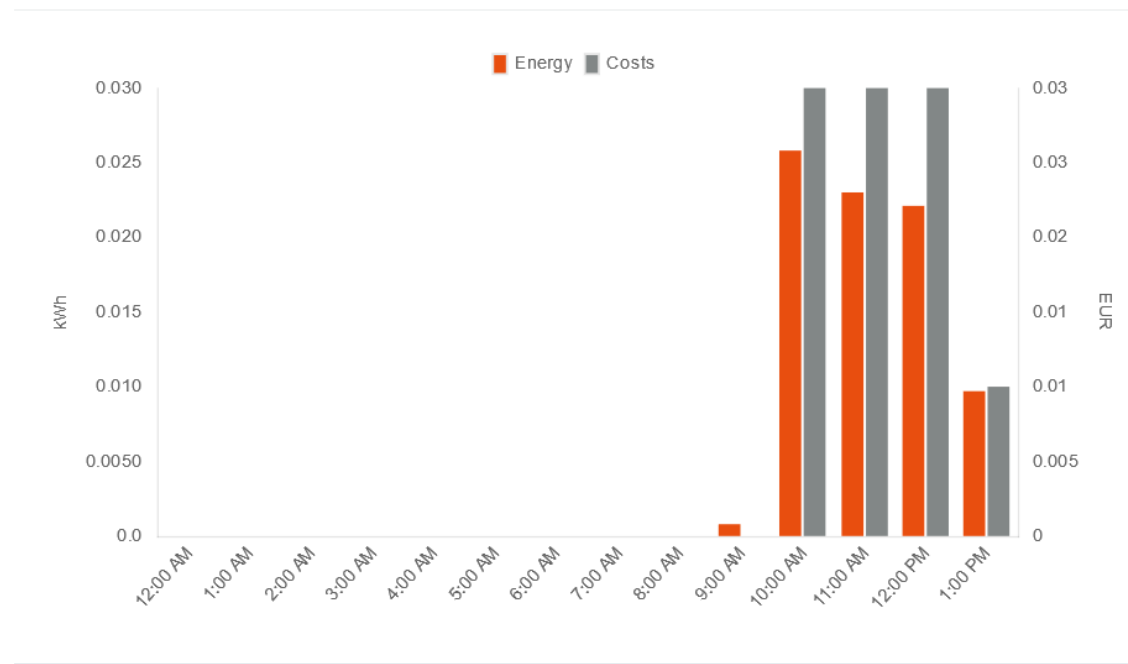







Change tariff settings



06 Mar 2019





-  Dashboard
-  KOSTAL Solar Electric
-  Modbus Settings
-  Smart Meter
-  **Tariffs**
-  Device Settings

Home / Tariffs / Settings

Settings

Contract information

Currency


Monthly base fee

Device timezone

SAVE

EDIT

Tariff name

	12:00 AM	3:00 AM	6:00 AM	9:00 AM	12:00 PM	3:00 PM	6:00 PM	9:00 PM	11:59 PM	
Sun	0.13									
Mon	0.13									
Tue	0.13									
Wed	0.13									
Thu	0.13									
Fri	0.13									
Sat	0.13									

All values in this table are in EUR.



Switch to tariff display

- Dashboard
- KOSTAL Solar Electric
- Modbus Settings
- Smart Meter
- Tariffs
- Device Settings**

Home / Device Settings / App


- 1 System Info**
Common system information.

Product name	KOSTAL Smart Energy Meter
Version	1.0.2
Serial number	72306211
CPU usage	22 % on i.MX28 (454 MHz)
RAM usage	21 % of 256MB
Hostname	em400-72306211
IP address	192.168.178.31
MAC address	00:d0:93:46:bb:bc
- 2 Network Settings**
Configure network interface.
- 3 Internal meter**
Set current transformer ratio.

If your device is connected to a transformer meter, configure the CT ratio here. **SAVE**

Use current transformer
- 4 Serial Interfaces**
Get status of serial interfaces.
- 5 Device**
Set time, reset device and update firmware.

- 1** System Info: Common Informationen
- 2** Network Settings: Configuration network
- 3** Internal meter: Set current transformer ratio
- 4** Serial Interfaces: Get status
- 5** Device: Set time, Reset Device, Update

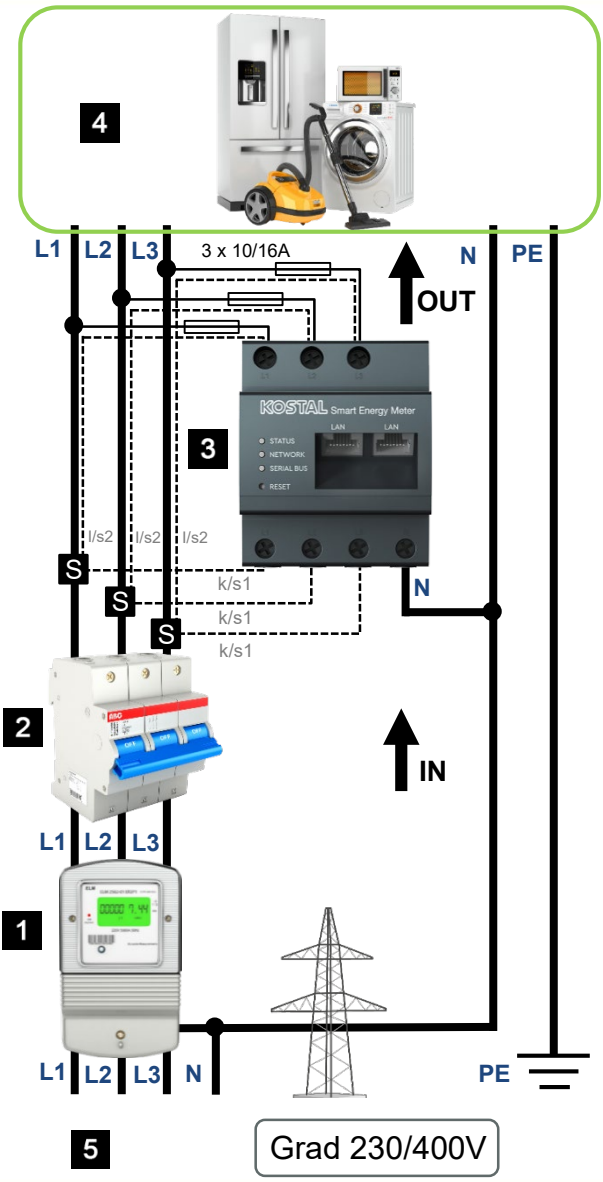

- 1** Energy meter Grid
- 2** Miniature circuit breakers
- 3** KOSTAL Smart Energy Meter (KSEM)
- 4** Home consumers
- 5** Energy suppliers - Grid

If external transformers are used for current measurement, the use of current transformers must be activated on the web interface in the device settings and the transformer ratio must be selected in the dropdown menu.

Internal meter

Set current transformer ratio.


If your device is connected to a transformer meter, configure the CT ratio here.

SAVE


Use current transformer

CT ratio


The PIKO IQ as string inverter

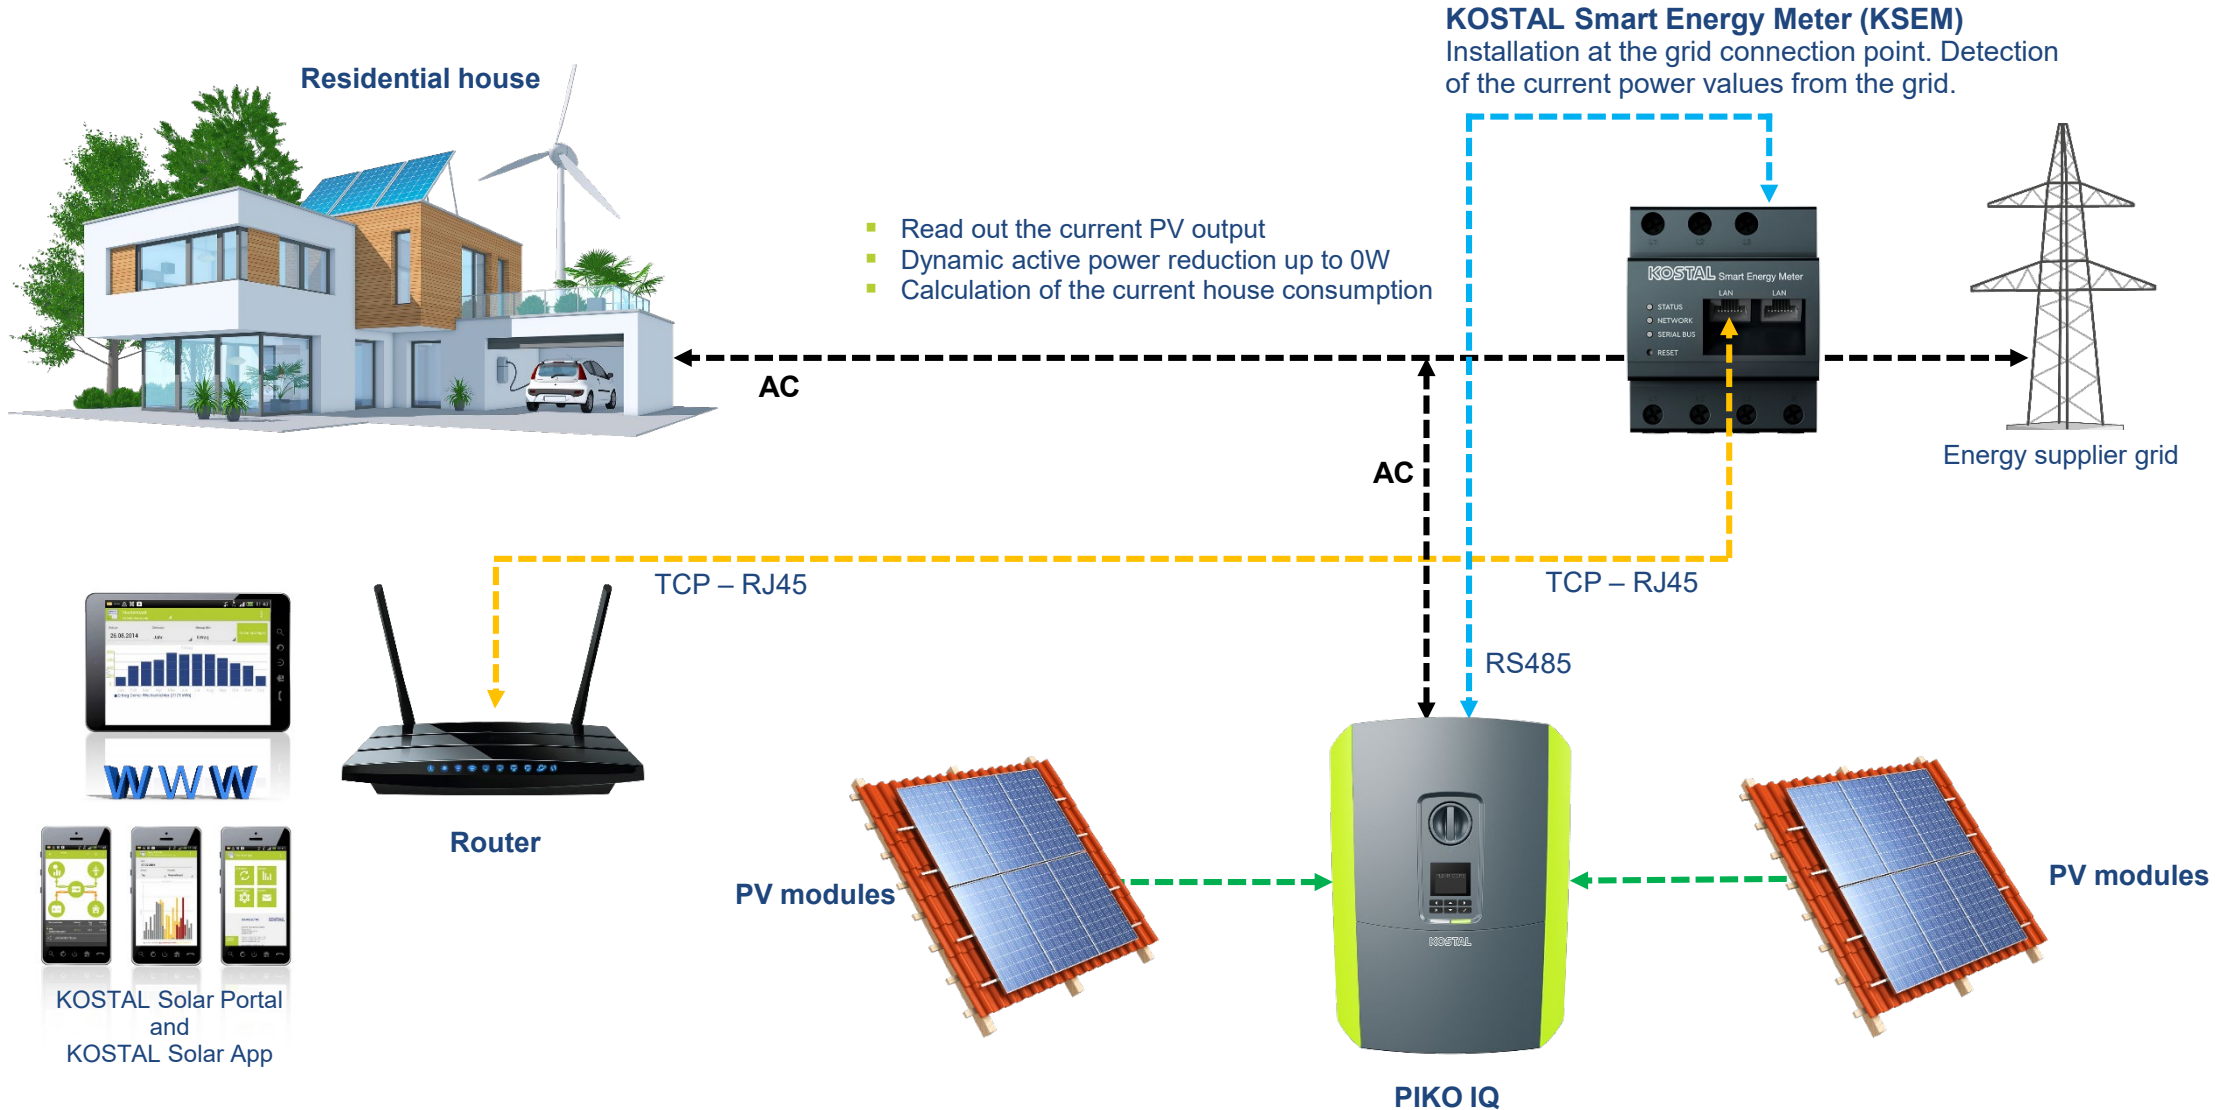

The PLENTICORE plus as string inverter

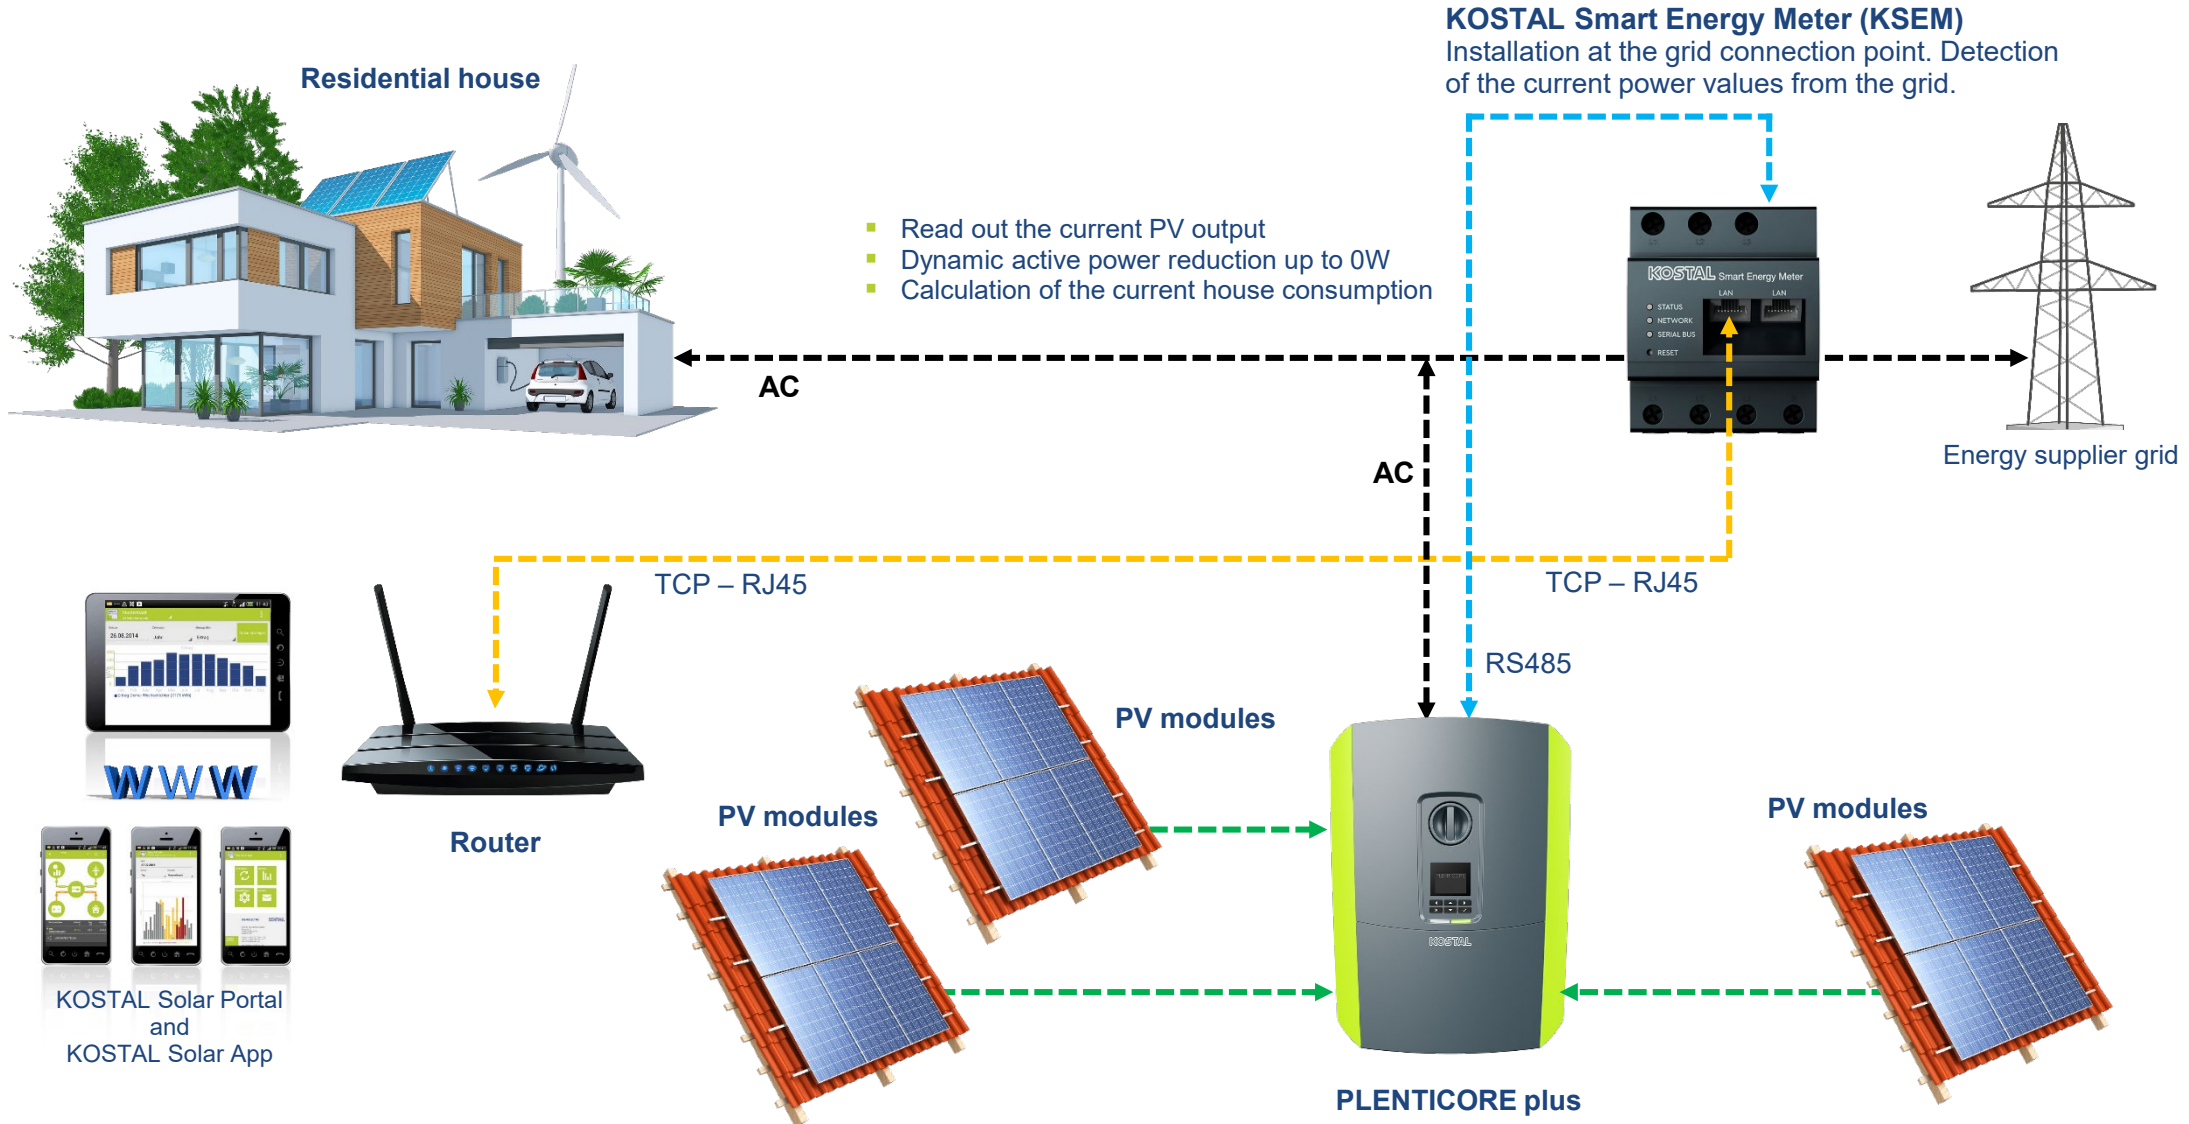

PLENTICORE plus inverter as hybrid with the BYD Battery-Box HV

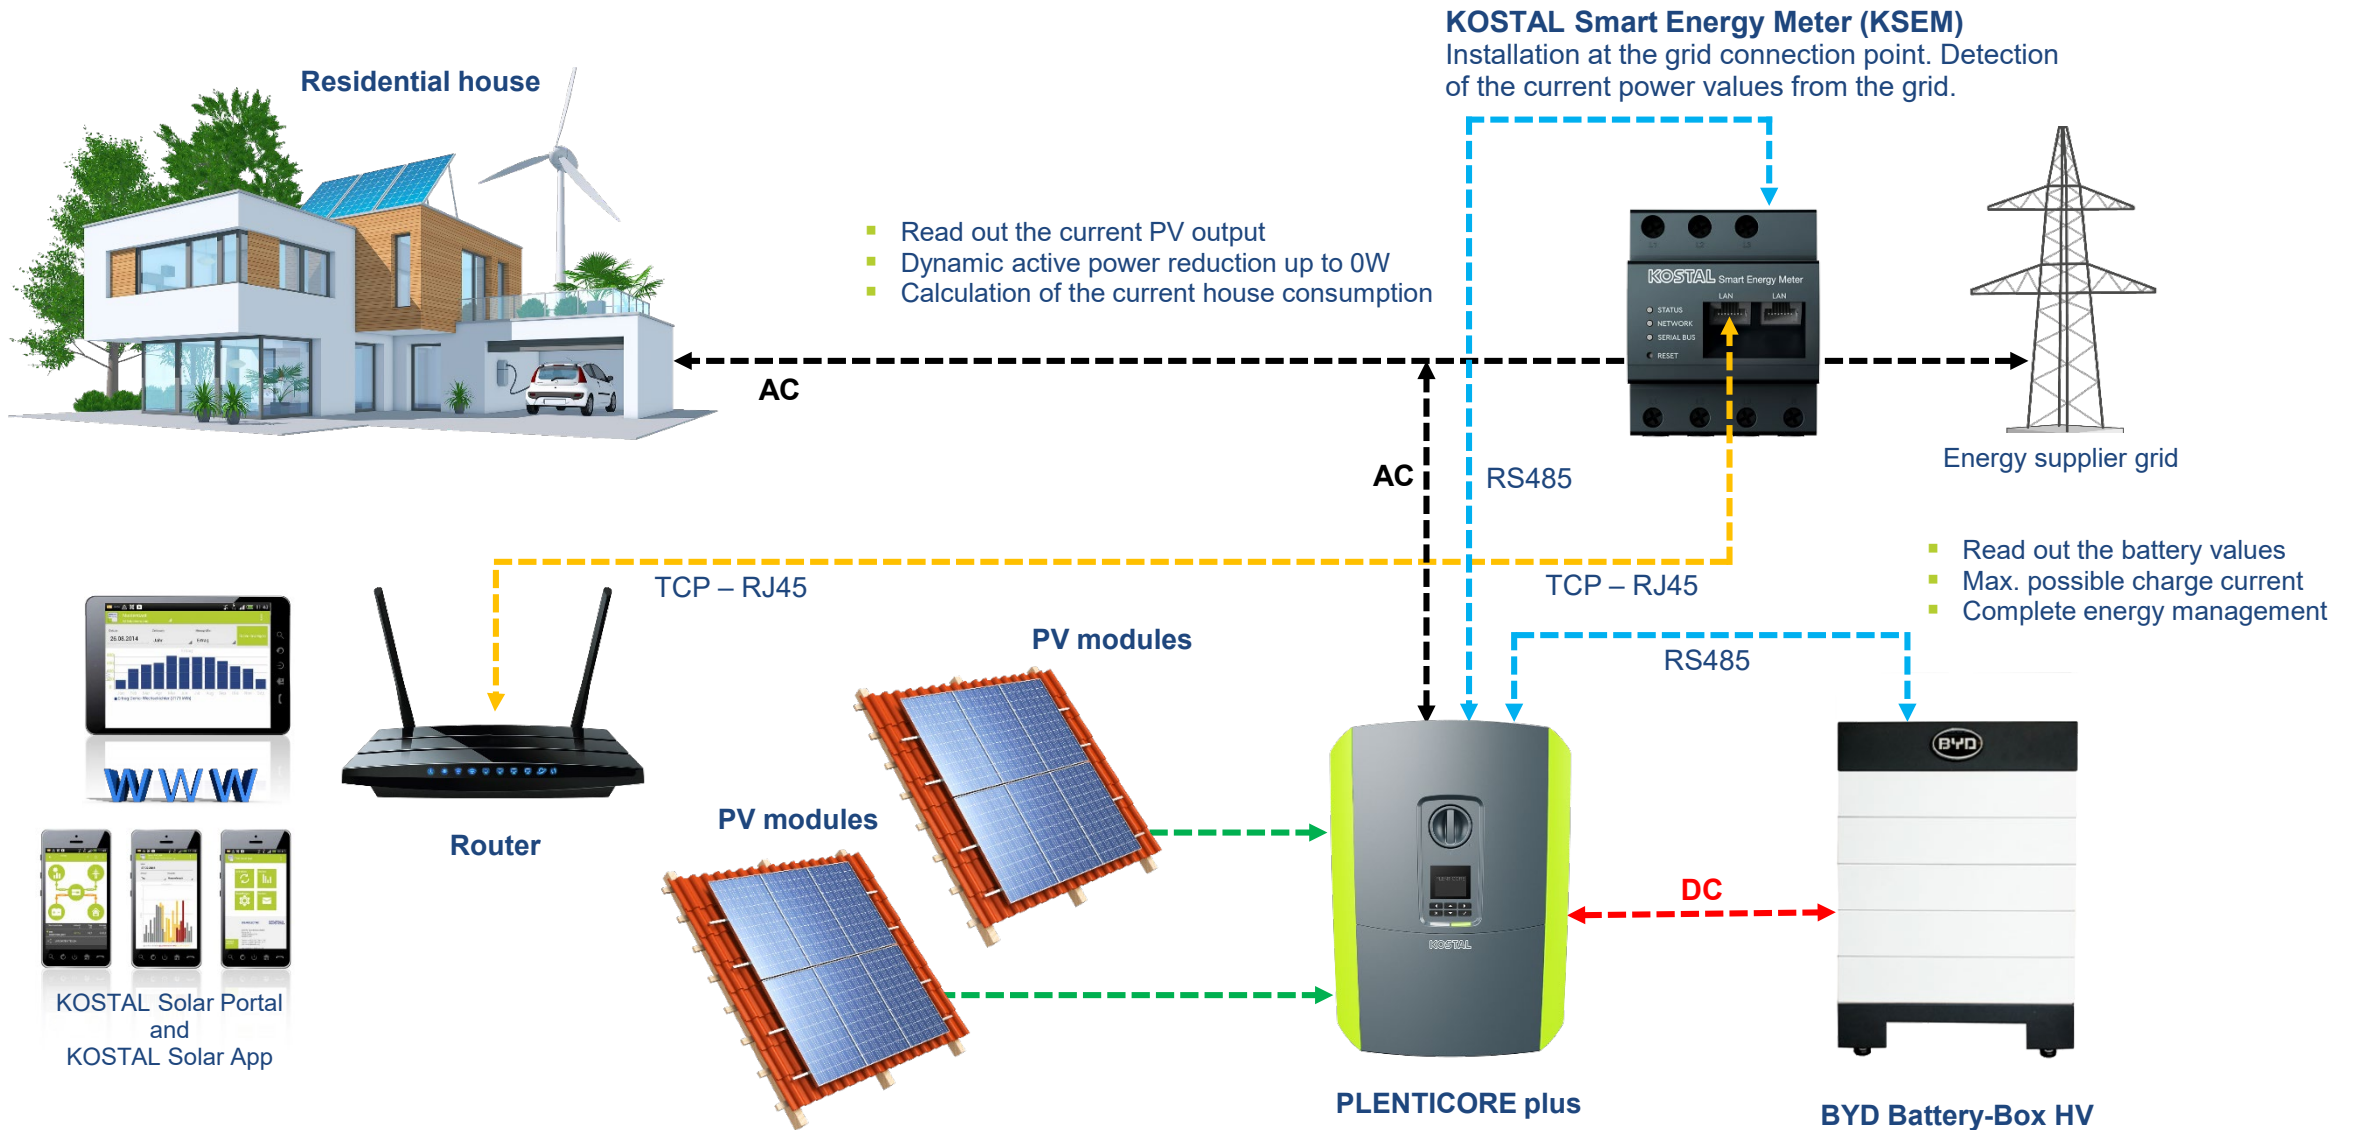



PLENTICORE plus • Einspeisen

Home Current values Statistics Log data Settings Service menu Update Info

Energy management

Energy meter

KOSTAL Smart Energy Meter

Sensor position

Grid connection point

Limitation of the active power to [W]

10000

Dynamic limitation of the active power takes place under consideration of the home consumption.

Storage of excess AC energy from local generation

If there is a ripple control receiver connected to another inverter's digital inputs, these signals can be allocated to all inverters in the local area network (LAN) for active and reactive power control by means of UDP broadcast.

A local energy manager can also generate signals for active and reactive power control in the local area network.

Empfang der Broadcast-Steuersignale aktivieren


Save

Checkbox: „Storage of extra AC energy from local generators“


To be able to activate this function, you must first have logged in as an installer with the master key and the service password.

This function works both with the B-control Energy Manager, the EM300 LR and the KOSTAL Smart Energy Meter (KSEM).


IMPORTANT: The sensor (Energy Manager/Meter) must be mounted in the "Grid connection point" position.

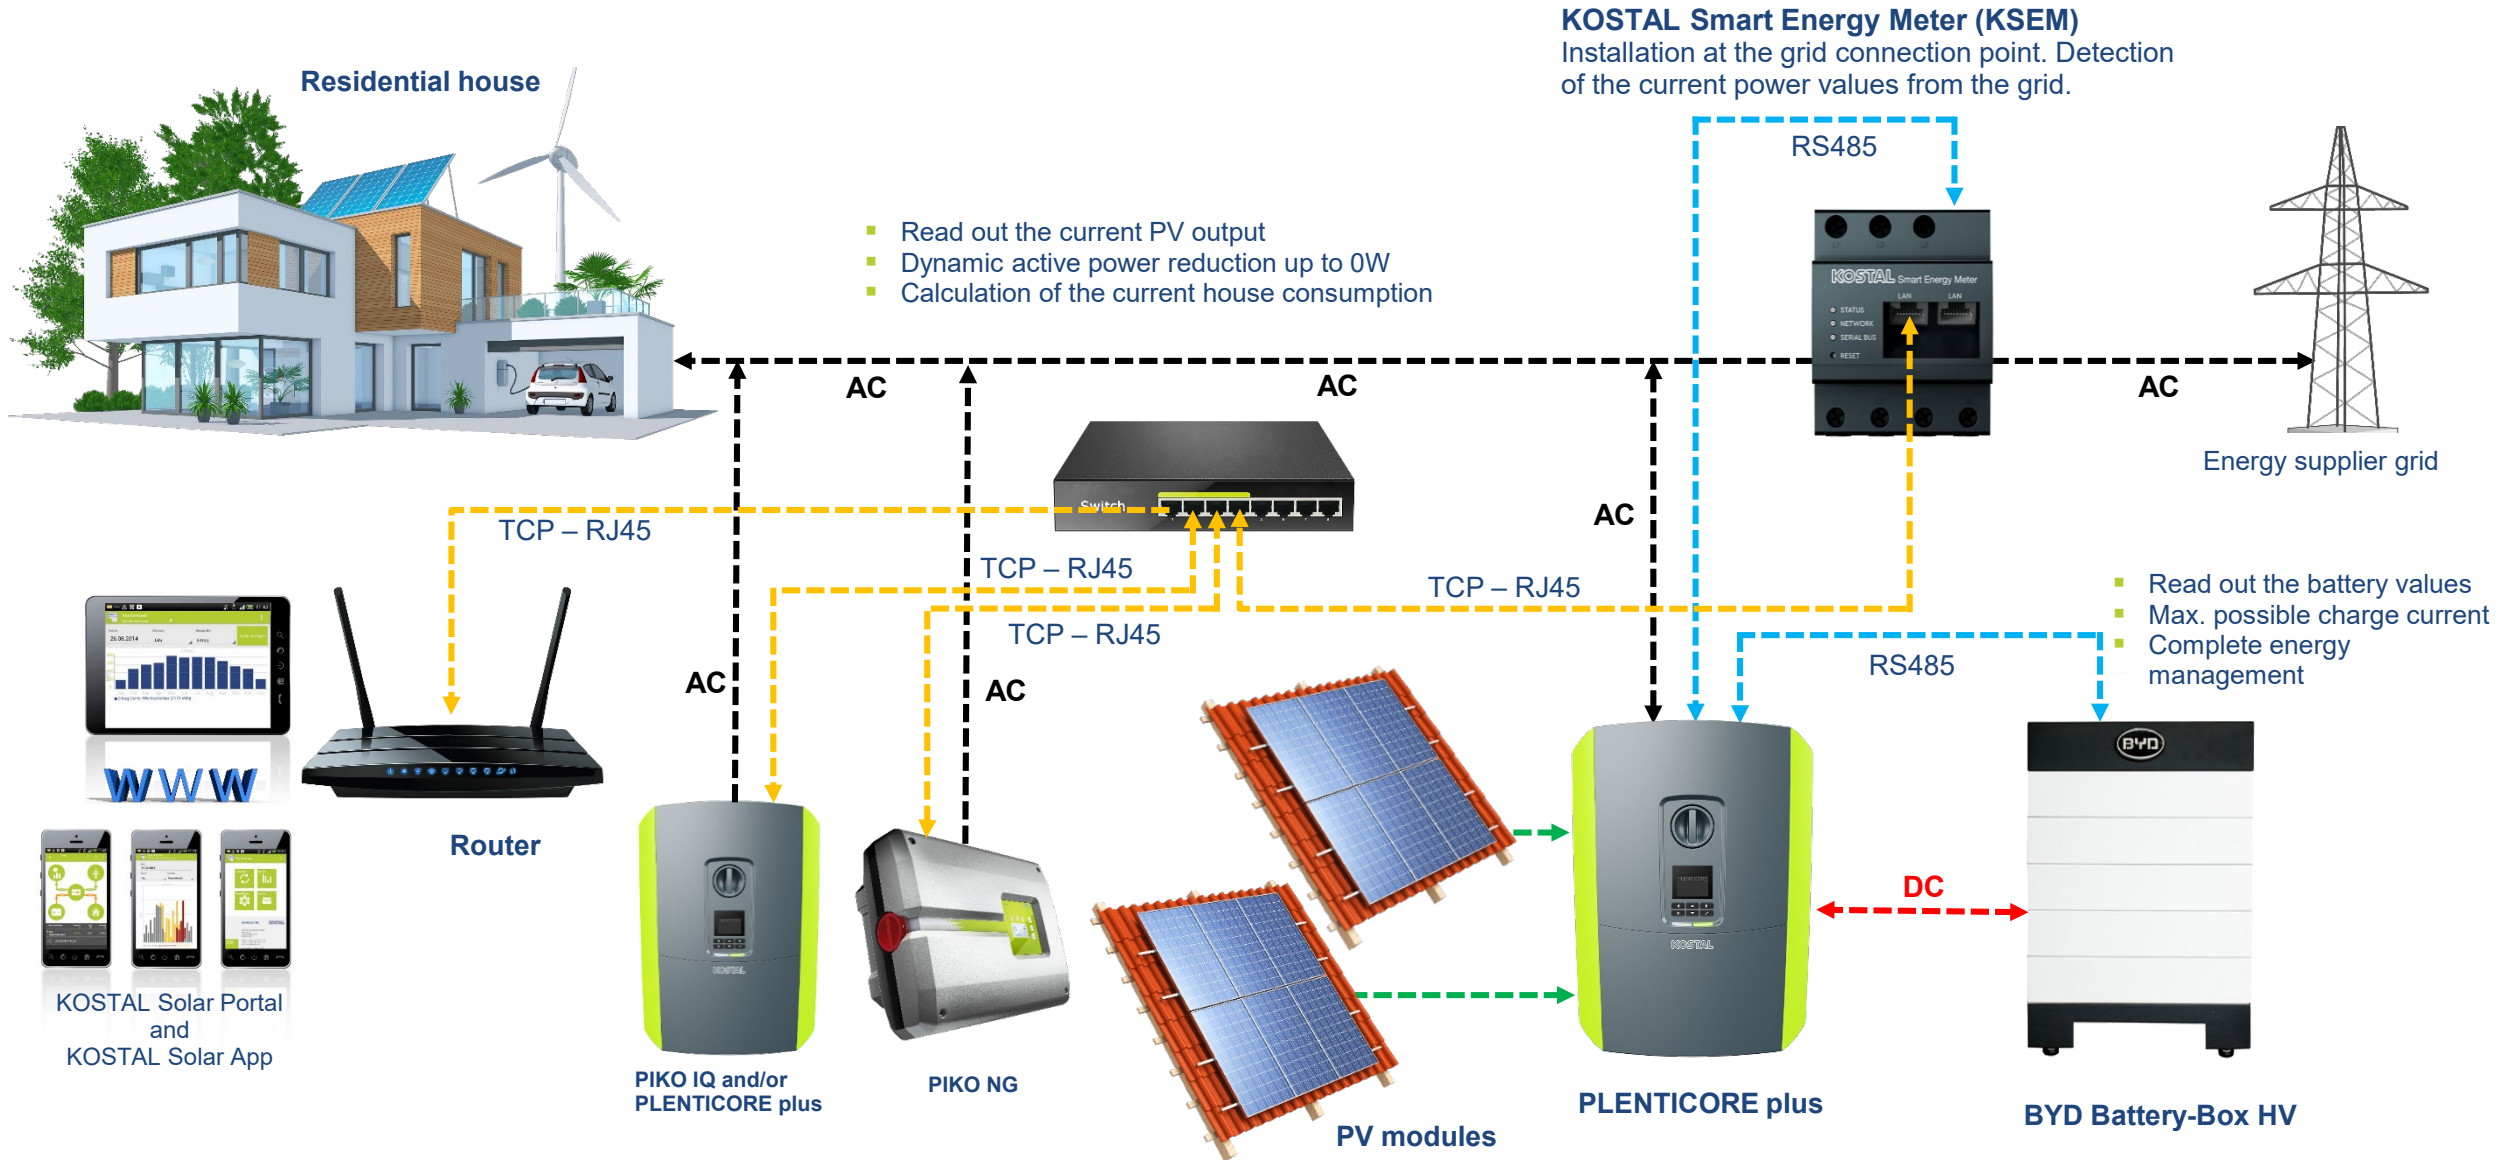


The PIKO MP plus as string inverter with 1 DC input

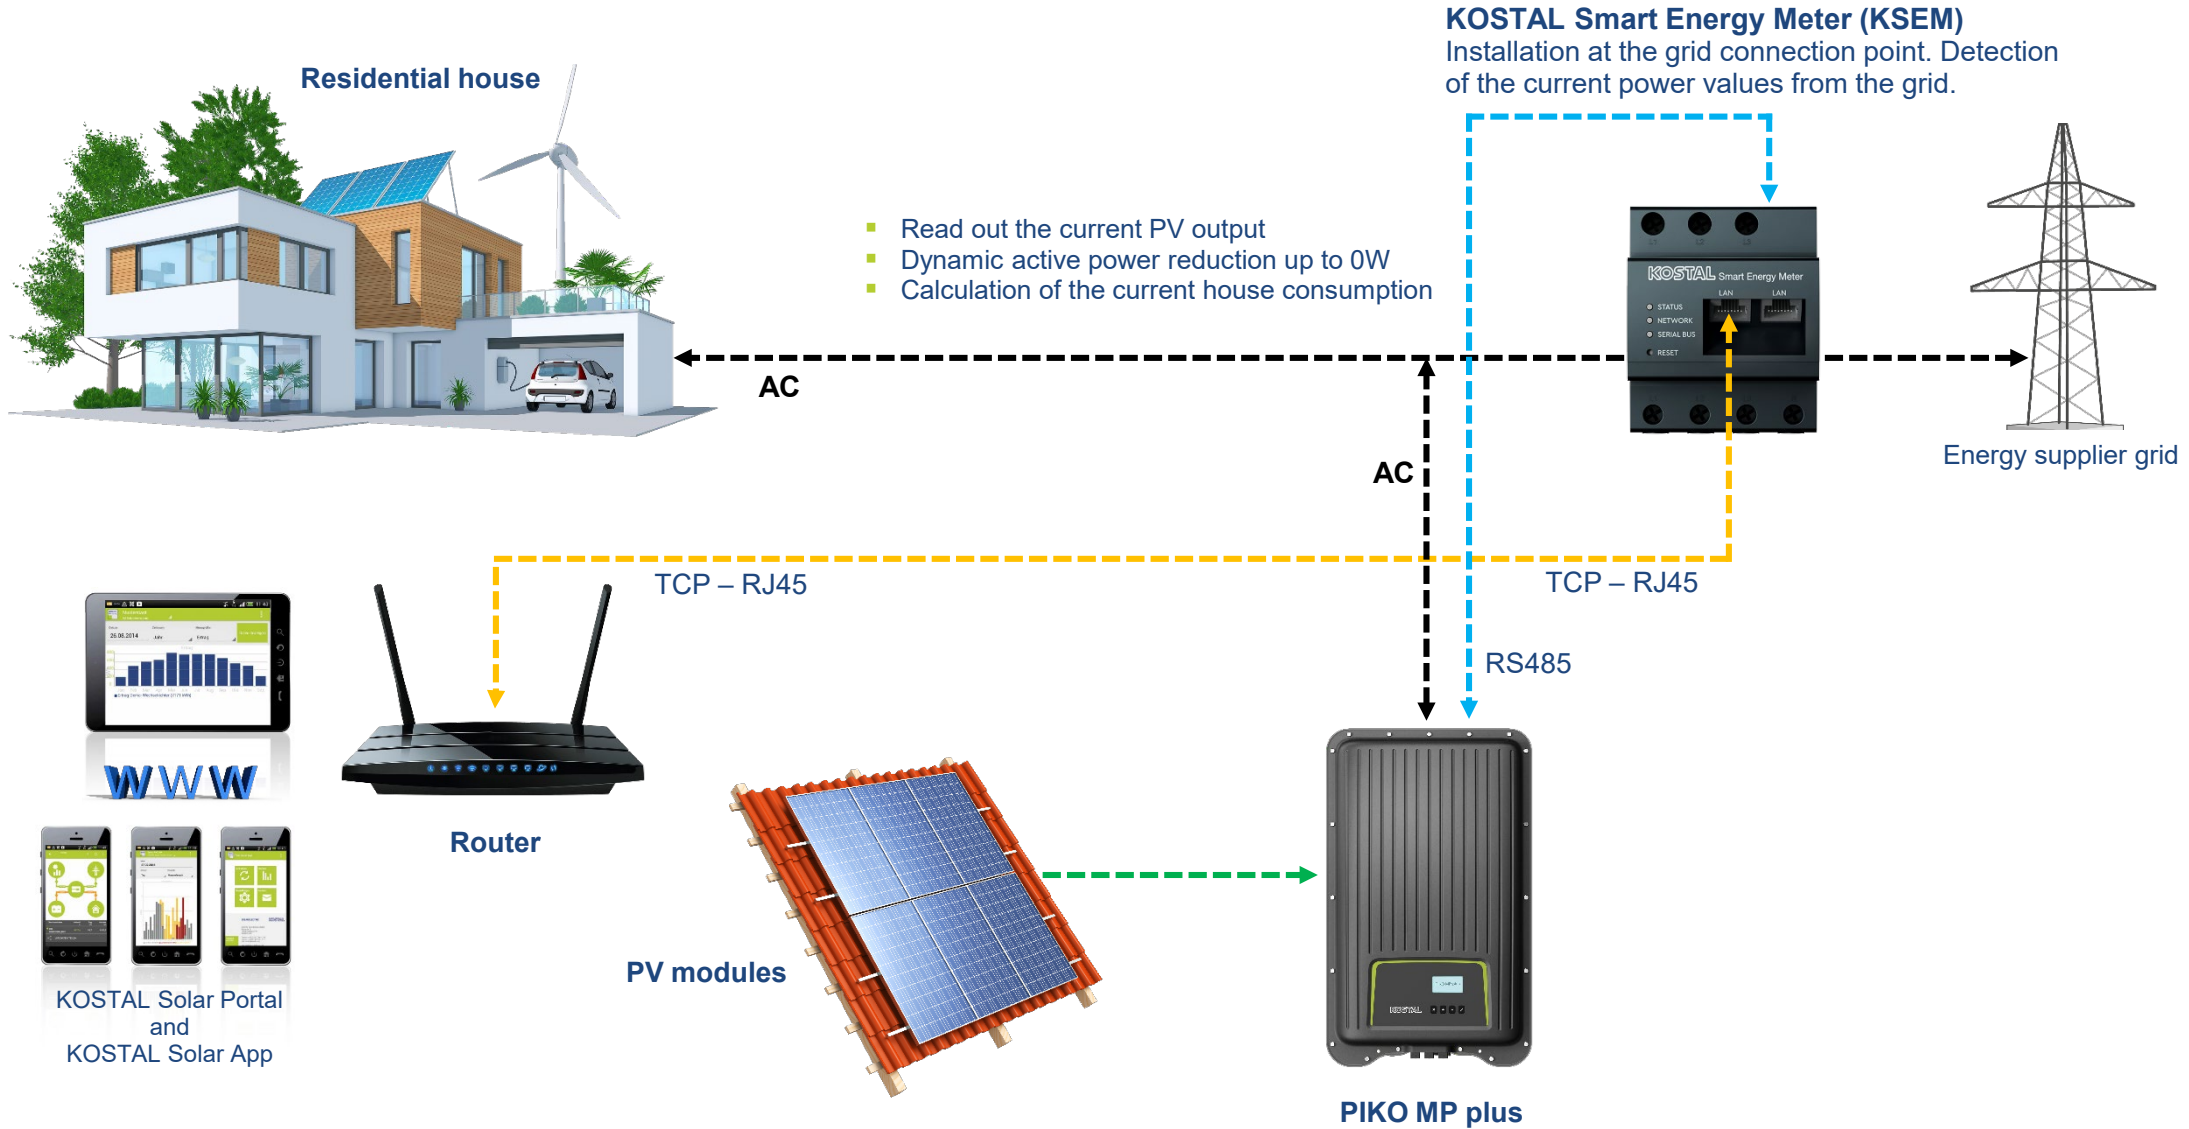


The PIKO MP plus as string inverter with 2 DC inputs

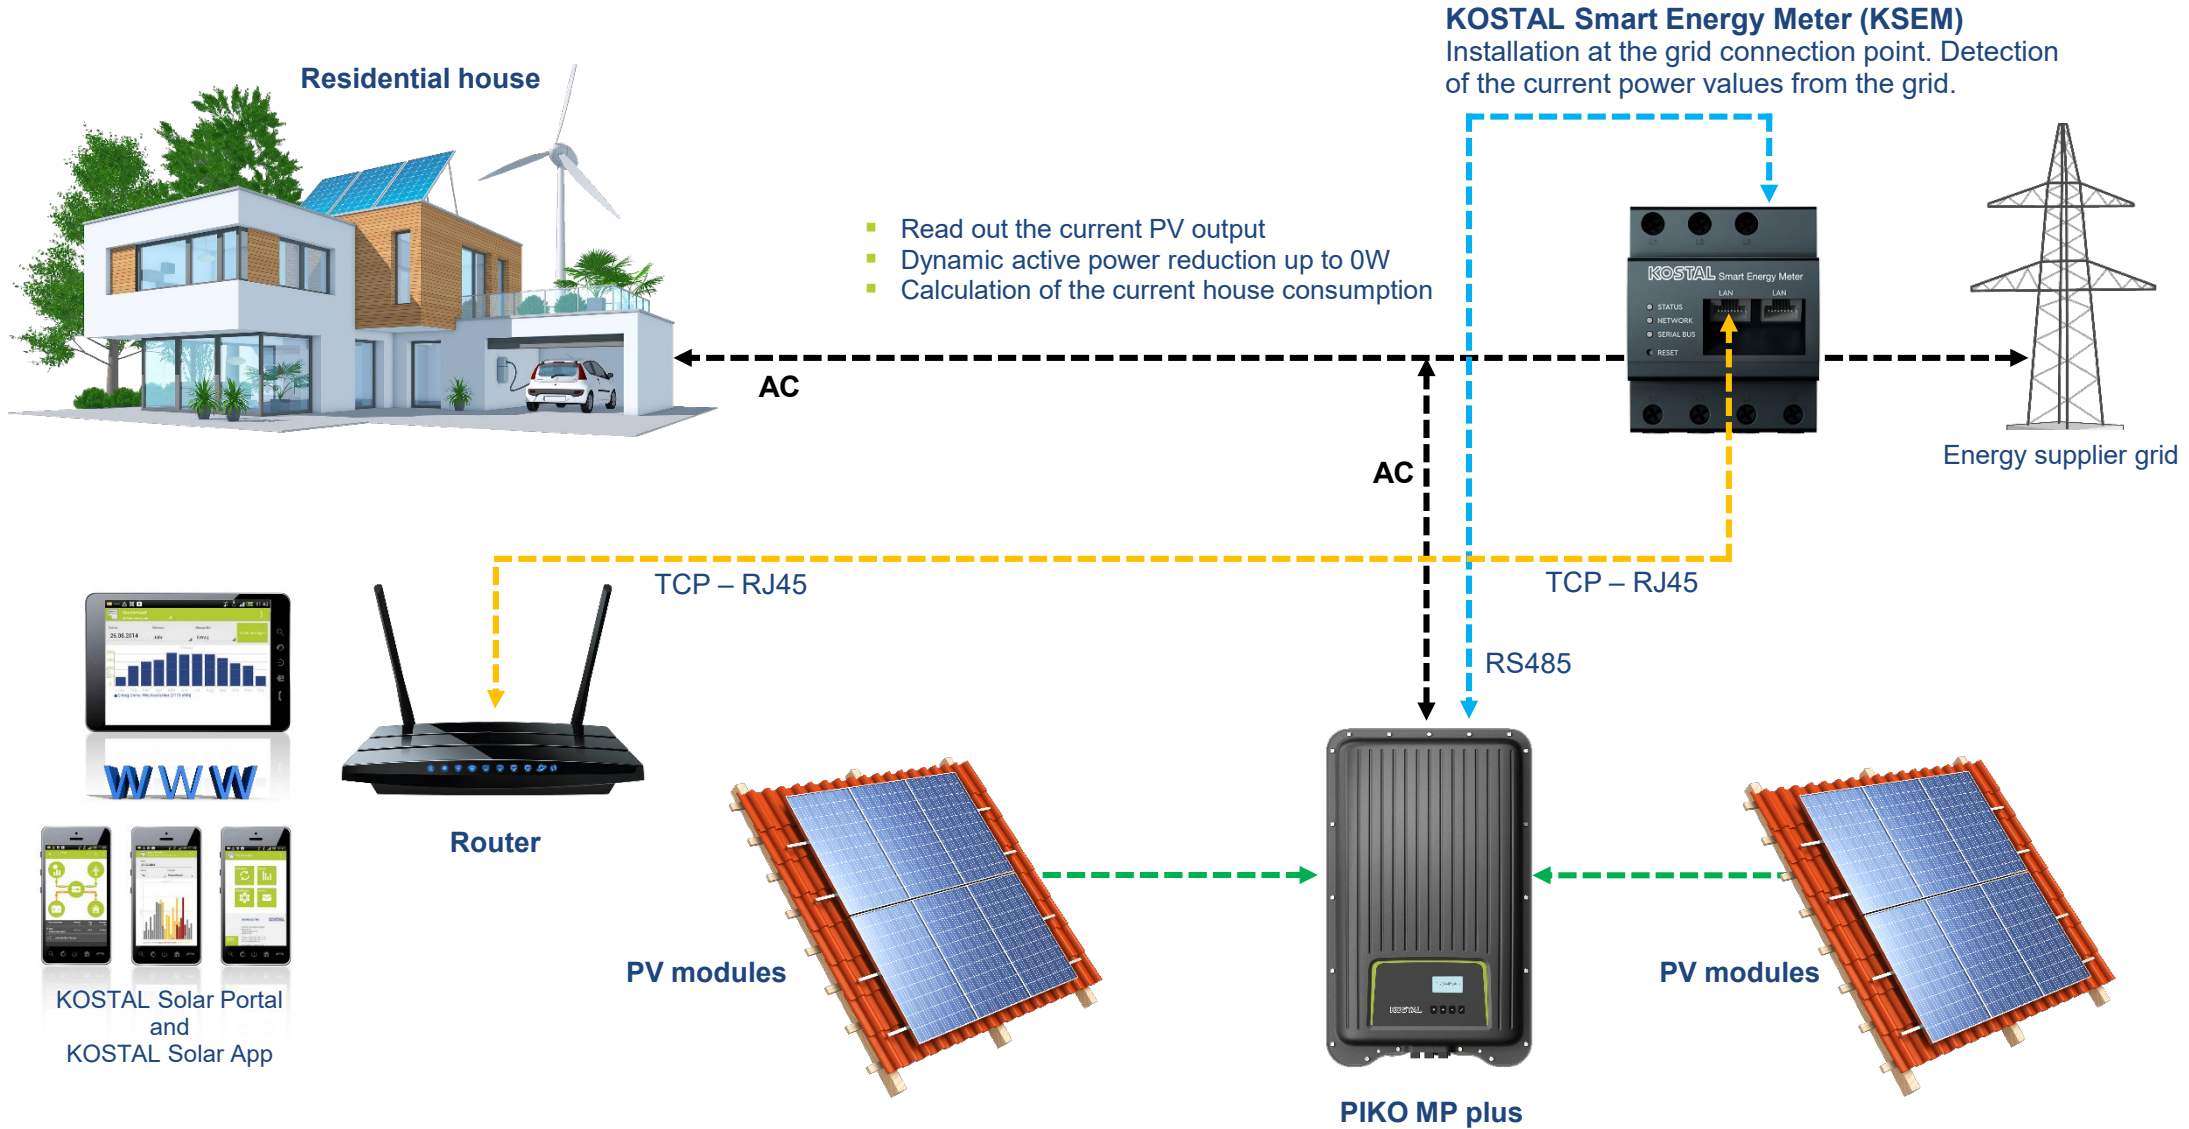

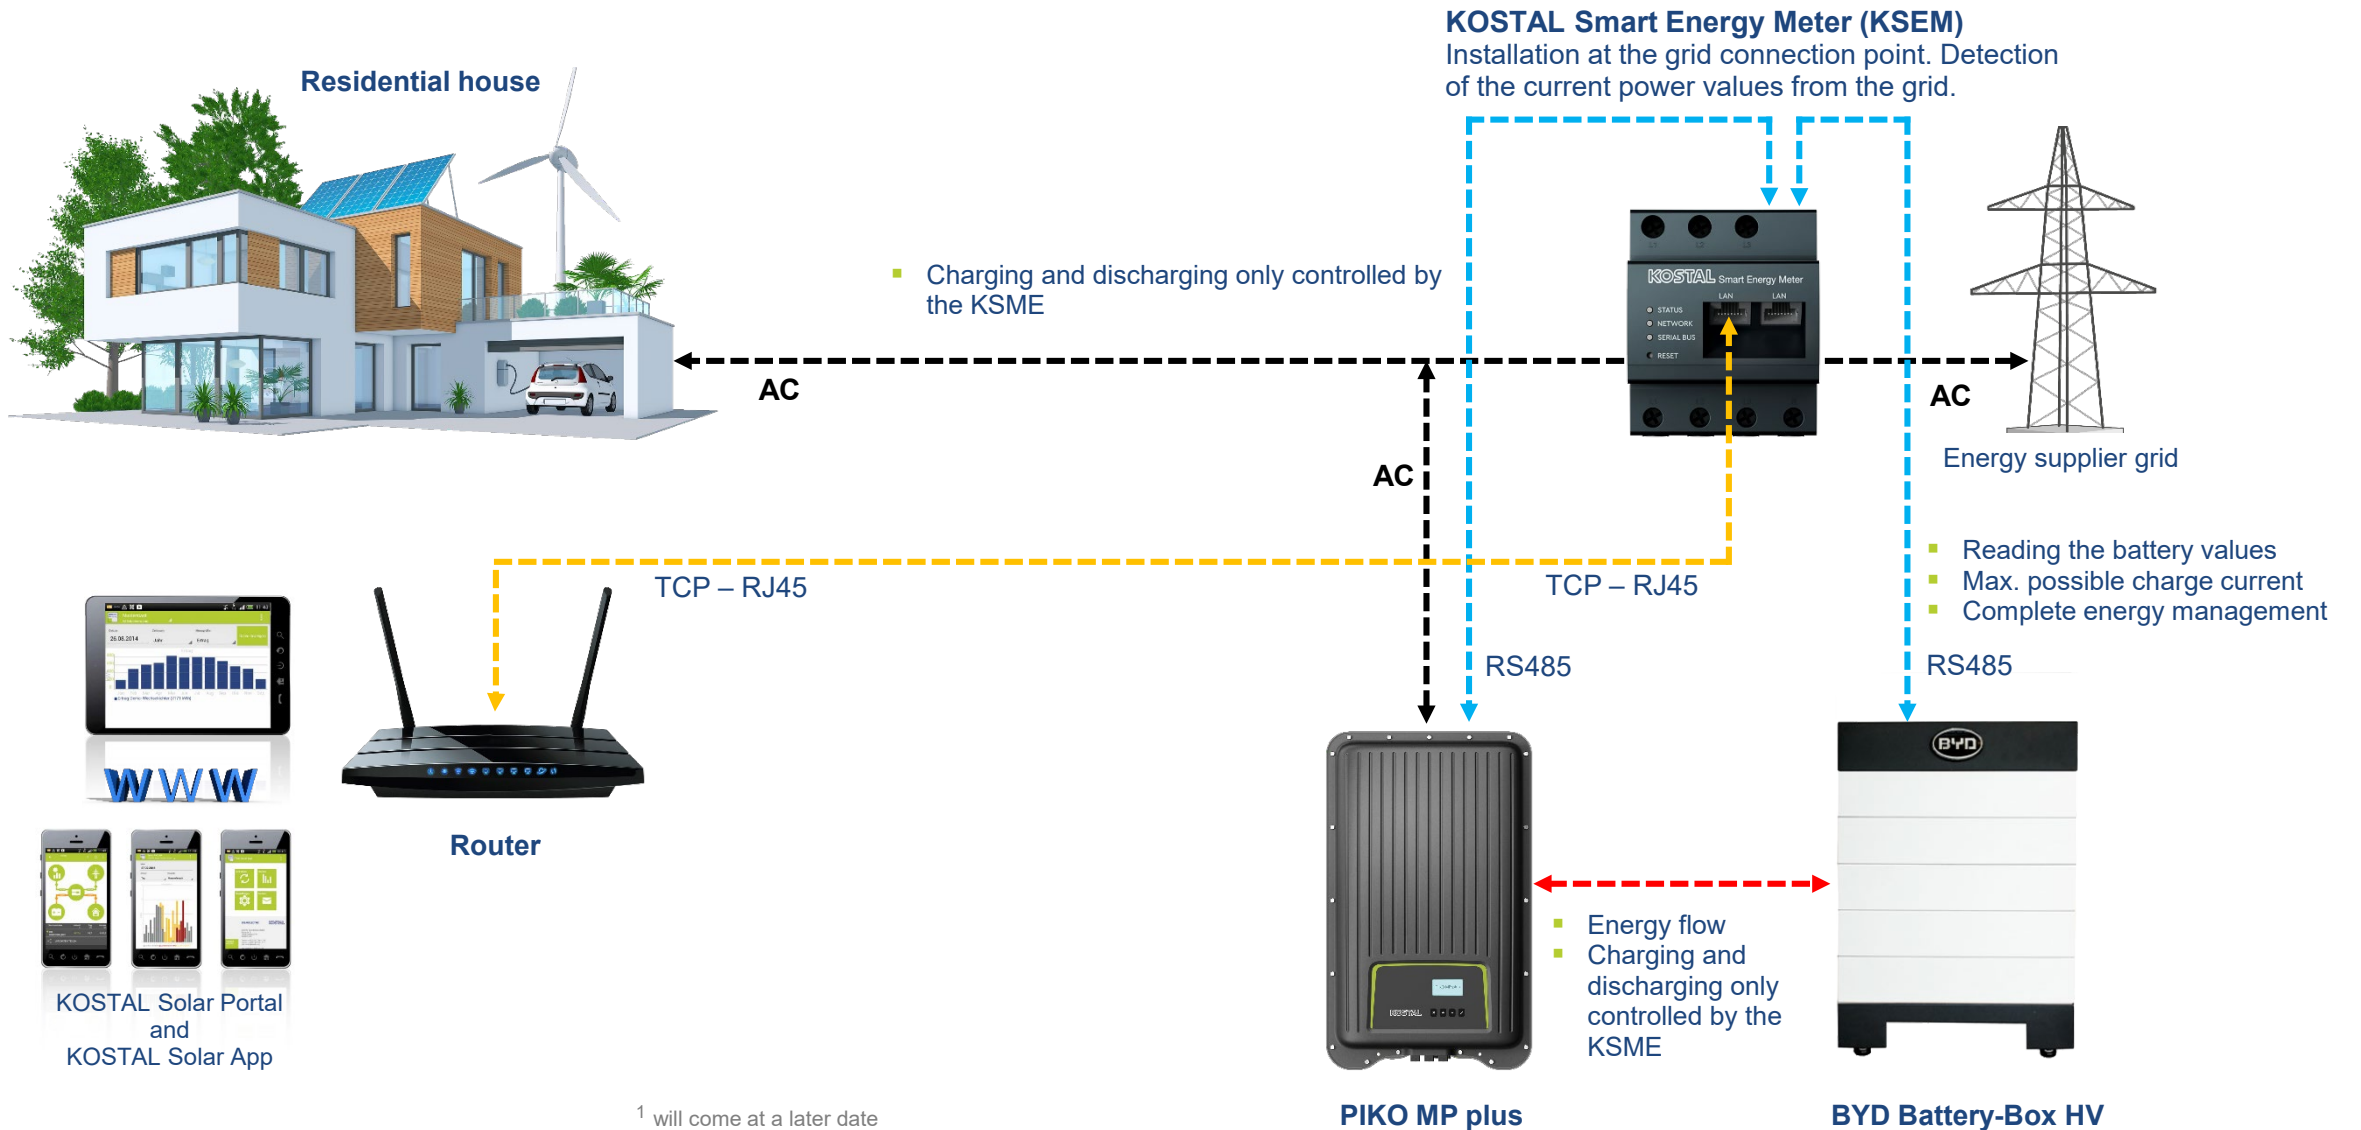

¹ will come at a later date

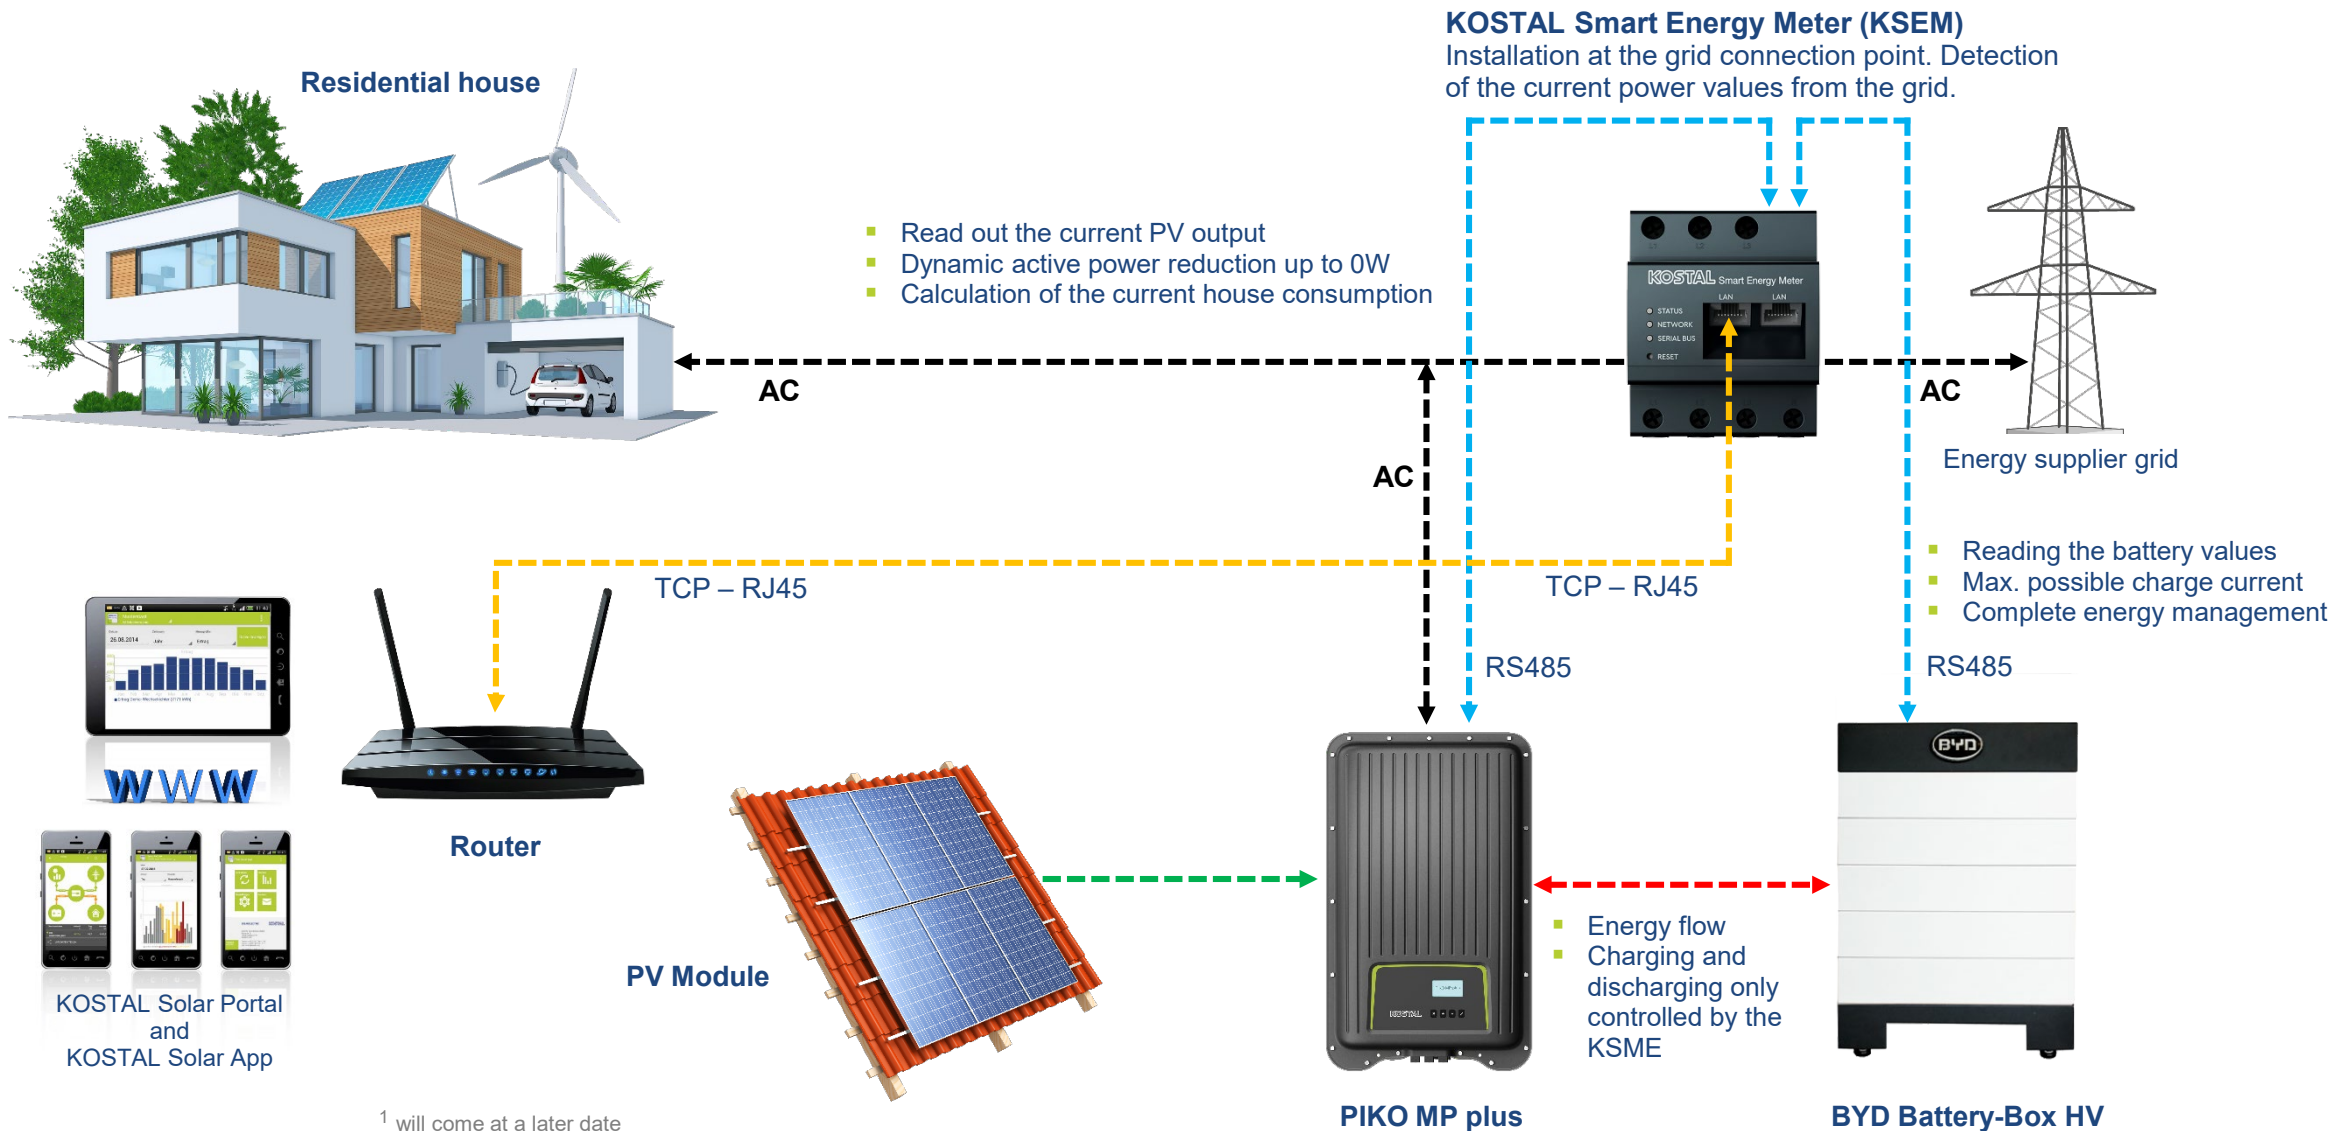

¹ will come at a later date


Multiple-inverter connection with PIKO IQ and/or PLENTICORE plus¹

Residential house



KOSTAL Smart Energy Meter (KSEM)
Installation at the grid connection point. Detection of the current power values from the grid.

- Read out the current PV output
- Dynamic active power reduction up to 0W
- Calculation of the current house consumption
- Send data to the KOSTAL solar portal

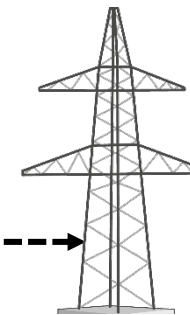

Energy supplier grid

AC

AC

AC

Ext. Switch

TCP – RJ45

TCP – RJ45

TCP – RJ45

TCP – RJ45

AC

AC

AC

PIKO IQ oder PLENTICORE plus

PIKO IQ oder PLENTICORE plus

PIKO IQ oder PLENTICORE plus



KOSTAL Solar Portal and KOSTAL Solar App

¹ will come at a later date

Multiple-inverter connection with PIKO Future¹


Residential house



- Control via broadcast to adjust the WR in % to max. output power up to 0W
- Reading the WR power to calculate the house consumption
- Sending consumption data to the PIKO Solar Portal

KOSTAL Smart Energy Meter (KSEM)

Installation at the grid connection point. Detection of the current power values from the grid.

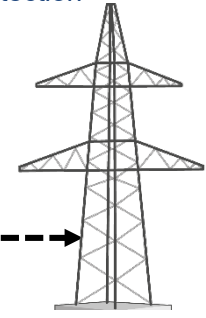

AC

AC

Energy supplier grid

TCP - RJ45

AC



WWW



PIKO NG

PIKO NG

PIKO NG

PIKO NG



KOSTAL Solar Portal and KOSTAL Solar App

TCP - RJ45

AC

AC

AC

TCP - RJ45

TCP - RJ45

TCP - RJ45

¹ will come at a later date



Residential house



- Control via broadcast to adjust the WR in % to max. output power up to 0W
- Reading the WR power to calculate the house consumption
- Sending consumption data to the PIKO Solar Portal

KOSTAL Smart Energy Meter (KSEM)

Installation at the grid connection point. Detection of the current power values from the grid.

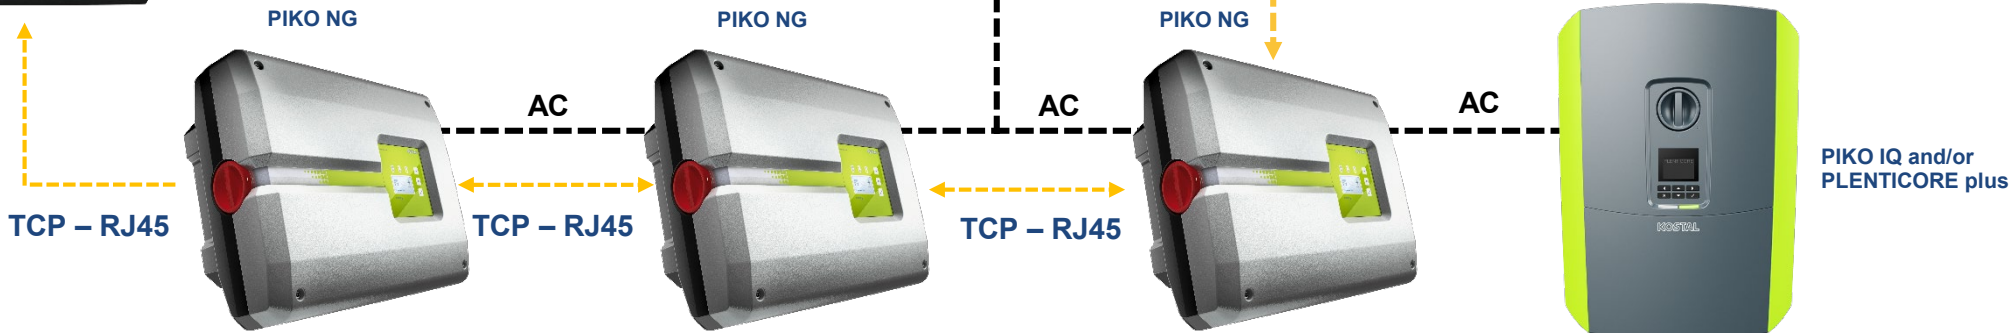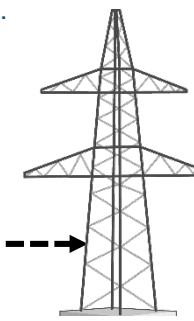

¹ will come at a later date